




This guide describes the basic operations of the Trium dual band GSM/GPRS telephone Eclipse.  
Edition 1, 2002. © Mitsubishi Electric Telecom Europe, 2002

RaymanBowling and RaymanGarden are published by Ludigames. Ludigames and Ludigames logo are trademarks of  
Ludigames S.A. © 2001 Ludigames.

Rayman is a trademark of Ubi Soft Entertainment. Rayman logo and character is a trademark of Ubi Soft Entertainment.  
Whilst every effort has been made to ensure the accuracy of the instructions contained in this guide,  
Mitsubishi Electric reserves the right to make improvements and changes to the product described in this  
guide and/or to the guide itself, without prior notice.

# The phone at a glance

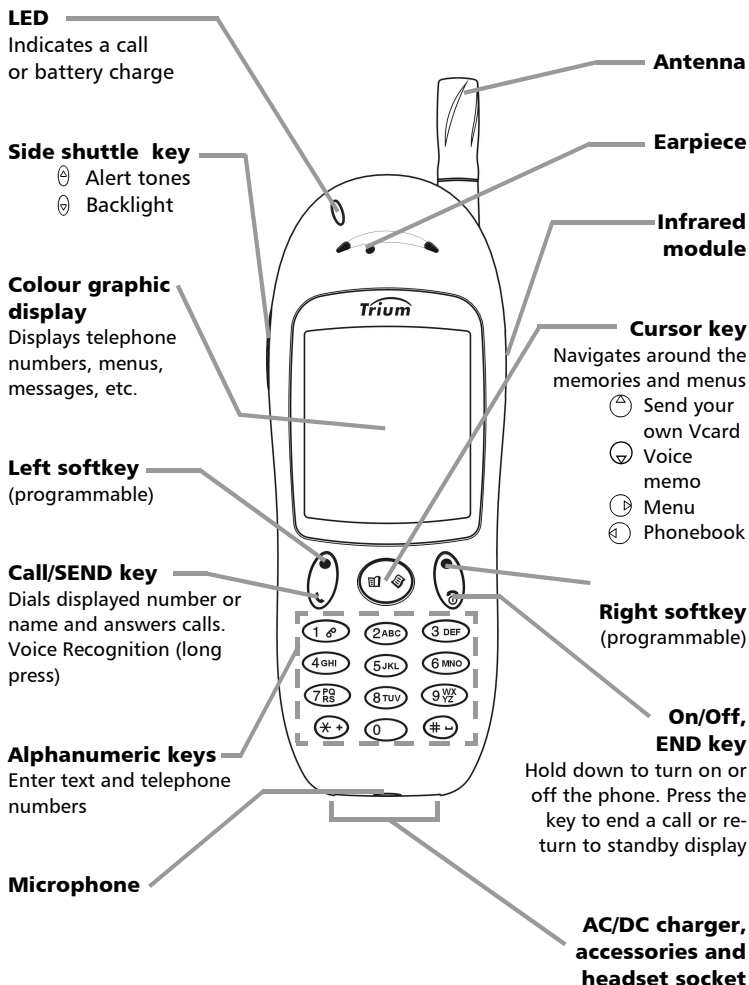

## SAR

---

### THIS ECLIPSE PHONE MEETS THE EU REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Before a phone model is available for sale to the public, compliance with the European R&TTE directive (1999/5/CE) must be shown. This directive includes as one essential requirement the protection of the health and the safety for the user and any other person.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radiofrequency (RF) energy recommended by The Council of the European Union. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones (CENELEC standard EN 50360: 2000) employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit recommended by The Council of the European Union is 2.0 W/kg. Tests for SAR have been conducted using standard operating positions (with reference to CENELEC standard EN 50361: 2000) with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output. The highest SAR value for this Trium Aura, Mystral or Odyssey model when tested for compliance against the standard was 0.941 W/kg. While there may be differences between the SAR levels of various phones and at various positions, they all meet the EU requirements for RF exposure.

There are a number of independent sources of information available to users including:

*Royal Society of Canada:* [www.rsc.ca](http://www.rsc.ca)

The International Commission on Non-Ionizing Radiation Protection (ICNIRP):  
[www.icnirp.de](http://www.icnirp.de)

*The US Food and Drug Administration:*  
[www.fda.gov/cdrh/ocd/mobilphone.html](http://www.fda.gov/cdrh/ocd/mobilphone.html)

*The World Health Organization:* [www.who.int/emf](http://www.who.int/emf)

Mitsubishi Electric belongs to the MMF, an international association of radio equipment manufacturers.

The MMF produces information such as this in accordance with its purpose of developing and presenting industry positions to independent research organisations, government and other research bodies.

Mobile Manufacturers Forum  
Diamant Building, 80 Blvd. A. Reyers  
B-1030 Brussels  
Belgium  
[www.mmfai.org](http://www.mmfai.org)

## Introduction

---

Thank you for purchasing the Trium Eclipse dual band mobile telephone. The mobile telephone described in this guide is approved for use on both the GSM 900/1800 and GPRS networks. Services and display messages may be different dependent upon your operators implementation.

As with all types of radio transceivers this mobile telephone emits electromagnetic waves and conforms to international regulations in so far as it is used under normal conditions and in accordance with the safety and warning messages given below and on pages 11 to 13.

## General safety

---

It is important to follow any special regulations regarding the use of radio equipment, due to the possibility of radio frequency, RF, interference.

Please follow the safety advice given below.



Switch off phone and remove the battery when in an aircraft. The use of mobile telephones in an aircraft may endanger the operation of the aircraft, disrupt the cellular mobile phone network and is illegal. Failure to observe this instruction may lead to suspension or denial of mobile telephone services to the offender, or legal action, or both.



Respect national regulations on the use of mobile telephones in vehicles. Do not use a handheld phone whilst driving. If you don't have a handsfree car kit, stop and park your vehicle safely before using your phone.



Switch off phone when at any refuelling point or near inflammable material.



Switch off phone in hospitals and any other place where medical equipment may be in use.



Respect restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress.



There may be a hazard associated with the operation of phones close to inadequately protected personal medical devices such as hearing aids and



pacemakers. Consult your doctor or the manufacturers of the medical device to determine if it is adequately protected.



Operation of phone close to other electronic equipment may also cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers recommendations.



Avoid prolonged contact between the antenna and your skin when the phone is switched on.

This apparatus is intended for use only when supplied with power from AC/DC adaptor chargers (FZ14130060, FZ14130070, FZ14130050, FZ14130090, FZ14130080 and FZ14130100), desk top charger (FZ14150030 and FZ14150020), and vehicle kits (FZ14150050 and FZ14150140).

Use of any other charger or adaptors will invalidate any approval given to this apparatus and may be dangerous.

# Table of contents

|                                                                               |           |
|-------------------------------------------------------------------------------|-----------|
| <b>1. Using this guide .....</b>                                              | <b>6</b>  |
| <b>2. Quick Start .....</b>                                                   | <b>8</b>  |
| Preparing the phone for<br>operation .....                                    | 8         |
| Basic Operations .....                                                        | 8         |
| <b>3. Safety information .....</b>                                            | <b>11</b> |
| Vehicle safety .....                                                          | 11        |
| Care and maintenance .....                                                    | 11        |
| Your responsibility .....                                                     | 11        |
| Security codes .....                                                          | 12        |
| Code supplied by the airtime<br>service provider .....                        | 12        |
| Code supplied by the<br>manufacturer .....                                    | 12        |
| Emergency calls .....                                                         | 13        |
| Battery .....                                                                 | 13        |
| Disposing of waste<br>packaging .....                                         | 13        |
| <b>4. Preparing the phone<br/>    for operation .....</b>                     | <b>14</b> |
| SIM card .....                                                                | 14        |
| Battery .....                                                                 | 14        |
| <b>5. Basic operations .....</b>                                              | <b>17</b> |
| Making and receiving calls ..                                                 | 17        |
| Time & Date setting .....                                                     | 18        |
| Unanswered call, voice<br>mail, new SMS message,<br>Inbox and Push indicators | 19        |
| Modify graphics themes .....                                                  | 20        |
| Entering text .....                                                           | 20        |
| Messages (SMS) .....                                                          | 23        |
| Phonebook .....                                                               | 24        |
| Voice dialling .....                                                          | 26        |
| Last dialled numbers .....                                                    | 26        |
| Speed dialling .....                                                          | 27        |
| Silent and vibrate alert<br>modes .....                                       | 27        |
| Hands free mode .....                                                         | 28        |
| Muting .....                                                                  | 28        |
| Volume adjustment .....                                                       | 28        |
| Holding and retrieving<br>a call .....                                        | 29        |
| Call waiting, swapping<br>and multi-party<br>conference calls .....           | 29        |
| Diverting incoming calls<br>(network service) .....                           | 31        |
| Language selection .....                                                      | 32        |
| Softkeys - programming<br>the softkeys .....                                  | 32        |
| Melodies download .....                                                       | 32        |
| Games .....                                                                   | 33        |
| Voice Memo .....                                                              | 34        |
| WAP™ .....                                                                    | 34        |
| GSM man machine<br>interface codes .....                                      | 36        |
| <b>6. The menu (MMI)<br/>    system .....</b>                                 | <b>37</b> |
| Access to the menus .....                                                     | 37        |
| Menu map .....                                                                | 37        |
| <b>7. Using the headset .....</b>                                             | <b>38</b> |
| Connecting the headset .....                                                  | 38        |
| Using the headset .....                                                       | 38        |
| Disconnecting the headset ..                                                  | 38        |

# Using this guide

Please take time to read this user guide. It contains a lot of useful information about your phone and the way that it operates on the network. The GSM network is now worldwide and allows you to make and receive calls to and from other countries (called roaming) as if you were in your home country. Some features included in this guide are called network features and are supplied by service providers. However before you can take advantage, or even activate many of the network features offered by the networks, you must subscribe to the services you require. For a full list and explanation of network features please consult with your service provider.

## Using the keys to follow the actions described in this guide

To help you quickly understand your way around this manual we have used symbols and expressions that are present on the keys and in the display itself

- |                                      |                                             |
|--------------------------------------|---------------------------------------------|
| ⬅ means left softkey.                | ⬇ means down arrow on round cursor.         |
| ➡ means right softkey.               | ➡ means the SEND key.                       |
| ➡ means right arrow on round cursor. | ⏏ means the END key.                        |
| ⬅ means left arrow on round cursor.  | ⬆ means pushing side shuttle key upwards.   |
| ⬆ means up arrow on round cursor.    | ⬇ means pushing side shuttle key downwards. |

**Function** ⬅ means the softkey with the corresponding function name. For example, **Internet** ⬅ means press the softkey under the word **Internet**.


**Messages** words seen in this format are the actual words seen in the display.  
**Select** means use ⬆ and ⬇ on the round cursor key to scroll to the required item in the menu and validate by pressing ⏏.  
For example, select **Phone Book** means scroll to the menu item **Phone Book** and validate by pressing ⏏.

**Press** means press the corresponding key. Press ➡ means press the SEND key.

## Understanding the Graphic Display Indicators (Icons)

The graphic display has a main area capable of displaying up to four lines of characters plus one row of special display indicators or icons.

These icons are used to display the phone's operational condition during use.

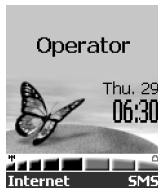

The display also displays alphabet characters and numbers as well as the phones menu list and instructions.

The special icons which appear in the display during operation have the following meaning:



**SIM memory in use**



**Phone memory in use**



**Roaming.** Is displayed when the phone is logged on to a network different from its home network.



**Short message service (SMS).** Is displayed when one or many short messages have been received and have not been read. It flashes  when the SMS message bank is full and cannot store new messages.

The availability of this feature is network dependent.



**Voice mail.** Is displayed when a voice mail message has been received and stored by the networks voice mail centre. The availability of this feature is network dependent.



**Call diverting.** Indicates whether incoming calls are permanently being diverted. The availability of this feature is network dependent.



**Battery level indicator.** Is permanently displayed to indicate the current charge level of the battery. Three levels are shown:  full (three green bars),  medium (two green bars),  low (one green bar).

It is  (one red bar), when the battery is almost empty.



**Arrow keys.** These icons are seen during menu operation to indicate that more items in the menu can be displayed if  or  are pressed. More than one arrow may show at any one time.



**Line 2.** Indicates the second line is in use. The availability of this feature is network and subscription dependent.



**Unanswered call.** Is displayed when an incoming call is unanswered.



**Signal strength level.** There are five levels. It indicates the strength of the received signal. The more bars the stronger the signal. If no network is available the display remains blank.



**Keypad lock.** It indicates whether keypad lock is on or off.



**Alarm clock icon.**



**Vibrator alert icon.**



**Ring tone off icon.**



**Mute icon.**



**Tegic edit mode icon.**



**WAP™ 'live' connection icon.**



**WAP™ 'live' connection in security mode icon.**



**WAP™ connection with GPRS icon.**



**WAP™ connection with GPRS in security mode icon.**



**Infrared port icon,** indicates the infrared port is active i.e. data can be received from or sent by the infrared port.



**GPRS service icon.** It indicates data packet services are available.



**Inbox icon,** indicates new messages in inbox.



**Push Messages icon,** indicates the reception of new push messages.



**Outgoing Call icon.**



**Incoming Call icon.**



**Active Call icon.**



**Multiparty icon.**

# Quick Start

In order to become familiar with the phone straightaway follow these simple steps.

## Preparing the phone for operation

---

Please refer to page 14.

## Basic Operations

---

### Turning on the phone


- ❶ Press and hold down . The audible power tone is played. When switching on for the first time,  may appear for a few seconds. This is quite normal. The standard display will appear afterwards.  
A switch on tone will be heard. When switching on for the first time, enter the date & time.
- ❷ If the mobile is locked, **Enter lock code** will be displayed. Enter the 4 digit phonelock code and press **OK** .
- ❸ If your SIM is PIN protected, **Enter PIN** will be displayed. Enter the PIN code and press **OK** .

 Please refer to page 12 for more details on your PIN and lock codes.

A display animation will be shown.


### Standby display

This is followed by a registration tone after which the name or logo of the network and/or service provider will be displayed together with the time and date, signal and battery level indicators and the **Internet** and **SMS** softkey functions. This is the normal standby display:

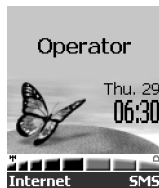

 also appears in the standby display if your phone is connected to a GPRS network\*.

If the **Mode of operation** value was set to **Modem** (see *Getting more out of your Eclipse*) and if the phone is attached to a GPRS network\*, the standby display will be the following:

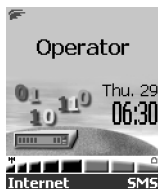

---

\* GPRS availability is operator dependent



- Pressing  allows you to beam "My card" through IrDA.
- Pressing  gives access to Voice memo listening (short press) or recording (long press).
- Pressing  gives access to the main menu.
- Pressing  gives access to the Phone book.

Please refer to *Getting more out of your Eclipse* for more information.

## Keypad lock

When activated (turned on) keypad lock prevents accidental calls or actions being made by user when the phone is carried in a pocket, briefcase or handbag. When on keypad lock does not prevent calls being received, which are answered in the normal way. On completion of a received call keypad lock is automatically reactivated.

To turn keypad lock on:

Press and hold down .  will be displayed.

To turn keypad lock off:

Press **Unlock**  and press .

☒ When the keypad is locked the backlight may be switched on by pressing the side shuttle key downwards.

## Alert tones

Pressing  gives access to the Alert tones control (**Ring, Silent, Vibrate, Vibrate & ring, Vibrate then ring**).

## Internet

Pressing **Internet**  in the standby display allows you access to the internet main menu from which you can dial the home page offered by your network operator, or any WAP™ portal. Up to 10 WAP™ profiles and 20 bookmarks can be user configured.

## Messages (SMS)

Pressing **SMS**  in the standby display allows you access to the Internet main menu. Please refer to page 19 for more information.

## Making a call

- 1 Enter the desired telephone number using the numerical keys ( -  and ). A maximum of 47 digits can be entered. Correct any mistakes by pressing **Clear** . Holding down this key will clear the whole display.
- 2 To dial (send) the number press .  
Press and hold  to record the phone conversation. Please refer to page 34 for more information.

When the call is connected the conversation will be heard in the earpiece and a call timer will be displayed.

## Receiving a call

When a call is received, the phone will ring. The LED on the top of the phone will flash green and the flashing  will be shown. The backlight will also come on if the phone was set to do so or if in silent mode.

To accept (answer) the call:

Press .

- ☒ If the ring tone volume is set to zero (off) or if the phone has been set to 'Vibrate' mode, no audible sound will be heard.

To reject, or return the busy signal to the caller:

Press .

## Ending a call

Press .

- ☒ Waiting a few seconds or pressing the Exit softkey will return to the standby display.

## Turning off the phone

Press and hold down .

A switch off tone will sound to confirm your action. During switch off a display animation will be shown. The mobile will then turn off.

- ☒ Do not turn off the phone by removing the battery as data which may need to be saved in the SIM will be lost. Should this happen, the display may show a first-aid kit symbol for a few seconds at the next power on. This is quite normal. The standard display will show afterwards.

# Safety information

## Vehicle safety

---

- Respect national regulations on the use of mobile telephones in vehicles.
- Road safety always comes first! Always give your full attention to driving.
- If equipped with a correctly installed vehicle kit allowing "hands free" operation and you need to make or receive a call, ensure that it is done sensibly and safely. Use pre-programmed numbers where possible and keep calls short and routine.
- If incorrectly installed in a vehicle the operation of mobile telephones could interfere with the correct operation of the vehicle electronics, such as ABS anti-lock brakes or air bags. To avoid such problems ensure that only qualified personnel carry out the installation. Verification of the protection and operation of the vehicle electronics should form part of the installation. If in doubt consult with the manufacturer.
- Do not place the phone on the passenger seat or where it could break loose during sudden braking or a collision. Always use the holder.
- The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

## Care and maintenance

---

This mobile telephone is the product of advanced engineering, design and craftsmanship and should be treated with care. The suggestions below will help you to enjoy this product for many years.

- Do not expose the phone to any extreme environment where the temperature or humidity is high.
- Do not attempt to disassemble the phone. There are no user serviceable parts inside.
- Do not expose the phone to water, rain or spilt beverages. It is not waterproof.
- Do not abuse this phone by dropping, knocking or violent shaking.
- Do not clean the phone with strong chemicals or solvents. Wipe it only with a soft, slightly dampened cloth.
- Do not place the telephone alongside computer discs, credit or travel cards or other magnetic media. The information contained on discs or cards may be affected by the phone.

## Your responsibility

---

This GSM mobile telephone is under your responsibility. Please treat it with care respecting all local regulations. It is not a toy therefore keep it in a safe place at all times and out of the reach of children.

Try to remember the phonelock and PIN codes associated with the use of this phone.

Become familiar with and use the security features to block unauthorised use if your phone and/or SIM card are lost or stolen. Call your service provider immediately to prevent illegal use.

When not in use lock, turn off the phone and remove the battery.

## Security codes

---

The phone and SIM card are delivered to you pre-programmed with codes that protect the phone and SIM card against unauthorised use.

When requested to enter any of the codes, key in the number (appears as \* asterisks in the display) and press **OK** (OK).

Keying mistakes can be erased by pressing **Clear** (Clear).

If you enter the wrong code an appropriate message will be displayed.

Codes supplied with the SIM card are:

### PIN and PIN2 codes (4-8 digits)

The PIN (Personal Identity Number) is supplied with all SIM cards and protects the card against unauthorised use.

The PIN2 code, supplied with some SIM cards, is required to gain access to some features in the phone (such as fixed dialling numbers) for which another level of security is required.

If **Enter PIN** appears in the display, enter the code and press **OK** (OK).

Entering the wrong PIN code three times in succession will disable the SIM card and the message **SIM Blocked. Enter PUK** will appear in the display. To unblock the SIM you will need the PUK (PIN Unblock Key) code, obtainable only from your service provider.

### PUK and PUK2 codes (8 digits)

The PUK code is supplied with the SIM card and is used to unblock a disabled SIM card.

When requested enter the PUK code and press **OK** (OK). You will be requested to reset the PIN code. Follow the instruction in the display.

The PUK2 code is required to unblock the PIN2 code.

## Code supplied by the airtime service provider

---

### Call barring password (4 digits)

This password is used to bar various types of calls, made or received, from the phone. Refer to *Getting More out of your Eclipse* for more details.

### Voice mail password

This password protects you against unauthorised access to your voice mail.

## Code supplied by the manufacturer

---

### Phonelock code (4 digits)

This code is set to all zeros on delivery and is user re-settable. Once changed it cannot be identified by the manufacturer over the phone. Refer to *Getting More out of your Eclipse* for more details.

**It is strongly recommended that you remember and make yourself familiar with the purpose and operation of these codes.**

## Emergency calls

In Europe, provided the phone has GSM service, emergency calls can be made using the European standard emergency number, **112**. Emergency calls can even be made if the phone is PIN or electronically locked or call barred. In some countries local emergency numbers can still be used for emergency purposes but the phone may have to contain a valid SIM card.

When making an emergency call remember to give all the necessary information as accurately as possible. The phone may be the only means of communication at the scene of an emergency therefore do not cut off the call until told to do so.

-  Mobile phones rely on wireless and landline networks which cannot be guaranteed in all conditions. Therefore you should never rely solely on wireless phones for essential emergency communications.

## Battery

### Battery use and safety information

A battery can be charged hundreds of times but will gradually wear out. When the operating time (standby and talk time) is noticeably shorter than normal it is time to buy a new battery.

- Do not leave batteries connected to a charger longer than necessary, overcharging will shorten battery life.
- Disconnect battery chargers from the power source when not in use.
- Do not expose batteries to high temperatures or humidity.
- Do not dispose of the batteries in fire. They may explode.
- Avoid putting the batteries into contact with metal objects which may short circuit the battery terminals (e.g. keys, paper clips, coins, chains etc).
- Do not drop or subject the batteries to strong physical shocks.
- Do not try to disassemble any of the battery packs.
- Use only the recommended battery chargers (see page 4).
- If the battery terminals become soiled, clean them with a soft cloth.
- It is normal for batteries to become warm during charging.
- Old batteries must be returned to the place of sale or to a place where used batteries are properly disposed of. Do not dispose of old batteries together with household waste.

### Battery disposal

In compliance with European environmental protection directives, used batteries must be returned to the place of sale, where they will be collected free of charge.  
Don't throw away your batteries in your household waste.

## Disposing of waste packaging

The packaging used for this phone is made of recyclable materials and as such should be disposed of in accordance with your national legislation on the protection of the environment.

Please take care to separate the cardboard and plastic elements and to dispose of them in the correct manner.

# Preparing the phone for operation


## SIM card

Before you can use your phone a valid SIM card must be inserted into the SIM card holder.

### Inserting the SIM card

Unpack the phone and insert the SIM card into the holder.

- ➊ Insert the SIM card gently as shown with the gold contacts facing down and the bevelled corner of the card at the top left.
- ➋ Press the SIM card down.

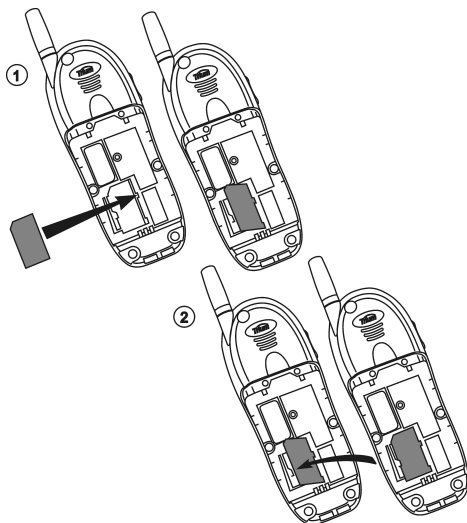

If the SIM card has been inserted the wrong way round or is damaged, **Check SIM!** will be displayed. Remove the SIM card, check that it is the right way round and re-insert it as described.


## Battery

### Fitting

Connect the battery as shown below.

- ➊ Position the battery onto the phone as shown.
- ➋ Push down the opposite end of the battery into the phone until the battery catches 'click' shut. Check the battery is securely in place.

### 3 Replace the battery cover.

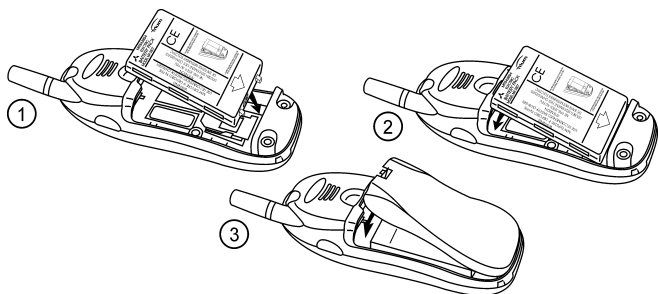

## Low battery warning

When the battery becomes too low for the current operations, a temporary warning screen is displayed, and a low battery warning tone will sound (in the buzzer if no call, in the ear-piece during a call), in order to inform you.

If you are on a call terminate the call and turn off the phone by pressing and holding down .


Recharge the battery as shown below or swap it for a charged one.

**Do not turn off the phone by removing the battery.** Data that needs to be saved by the SIM may be lost.

- ✓ Should this happen, the display may show a first-aid kit symbol for a few seconds at the next power on. This is quite normal. The standard display will show afterwards.

## Charging

To ensure a long life for your battery, re-charge it only when the warning screen is displayed and the low battery tone is heard. Connect the charger to the phone as shown.

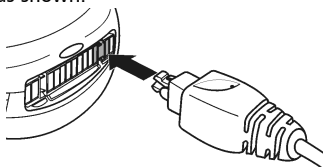


- ✓ While inserting the AC/DC adaptor plug in the phone adaptor connector make sure the Trium logo  appears on top.

Plug the charger into the wall socket and turn on the mains. The battery will start to charge.

The phone can be used whilst charging but it will increase the charging time.

## Charging indicators when the mobile is off


If the mobile is Off, the charging process is confirmed by a large animated display on the screen.

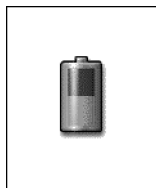


At end of charging, the screen indicates charge ended with a full battery icon. During the charging process, the LED is red. At the end of the process, the red becomes steady green.

## Charging indicators when the mobile is on

During charging, the battery icon cycles:

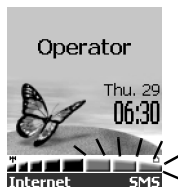

When charging is completed, the icon remains steady with all bars full. It is normal for the battery to warm up during charging. At the end of charging disconnect the charger from the phone (see below), switch off and remove the plug from the mains.

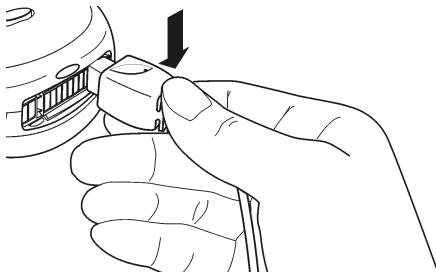

Typical charging times using the AC/DC adaptors (FZ14130060, FZ14130070, FZ14130050, FZ14130090, FZ14130080 and FZ14130100)

| Battery type                  | Typical charging time |
|-------------------------------|-----------------------|
| Standard battery (FZ14150060) | 2 hrs                 |



# Basic operations

## Making and receiving calls

The phone can only make and receive calls when it is switched on, unlocked, has a valid SIM card inserted and is located in an area that has GSM network service coverage. If the phone cannot find a network the display remains blank.

### Making calls

- 1 Enter the desired telephone number using the numeric keys (1 - 9 and 0).

International calls can be prefixed either with **00** or **+**. To enter the **+** symbol before a number press and hold down **\***.

A maximum of 47 digits can be entered. Correct any mistakes by pressing **Clear** . Holding down this key will clear the whole display.

- 2 Press  to dial (send) the number.

The dialled number together with the animated  icon will be shown in the display. When the call is connected, a ringing tone will be heard in the earpiece. When answered, a call timer will be displayed. Proceed with the call in the normal way.

- **Busy** in the display indicates that the called party is engaged. If Auto Retry is on, the phone will attempt to call again.
- **Not allowed (fixed dialling)** in the display means that the number dialled is not authorised by the FDN list.
- **No response** in the display indicates that the network is not answering.
- **Network busy** in the display indicates that the network is in overload.
- If the dialled number matches one stored in the phonebook then the associated name of the called person will appear in the display.
- The line 2 icon () will appear once the call is established (if this service is active) indicating that the call was made using this line.

 You can voice dial directly. Pre-stored spoken sentences allow voice dialling by pressing and holding . Refer to page 26 to learn more about the Voice dialling.

Speak-on  activates the hands-free feature. Refer to page 28 to learn more about the Hands free mode.

### Ending calls

To end a call:

Press .

The call timer will stop and  will disappear. Waiting a few seconds or pressing **Exit**  will return to the standby display.

### Receiving calls

When a call is received the phone will ring. The LED on the top of the

phone will flash green, the backlight will come on and the flashing  will be shown. If the ring tone volume is set to zero (off) or 'Vibrate', no audible sound will be heard.

To accept (answer) the call:

Press .

Pressing **No ring**  will stop the sound of the ring tone allowing you to silence the phone and go out of a room before pressing . If you wish to use the the hands free mode in the same time, press **Speak-on** .

When accepted  will be displayed. Proceed with the call in the normal way.

- If the callers number is not available **Unknown number** will be displayed during call presentation; then **Call1** will be displayed during call connection.
- If the callers number is available but does not match one stored in your phonebook it will appear in the display. If it does match a stored number then the associated name will appear instead.
- If the caller has withheld their number **Withheld number** will be displayed during call presentation; then **Call 1** will be displayed during connection.
- A call timer will also appear.
-  will appear if the call has been received on your line 2 number.

To reject or return the busy signal to the caller,

Press .

To end the call,

Press .

The caller's number, if available will be stored in the received calls log.

## Time & Date setting

Two clocks are managed by the phone:

- The **Origin clock**: corresponding to the time and date used for all processing in the phone.
- A **Secondary clock**: indicates the time of another part of the world.

Three settings are managed for each clock:

- The time difference with GMT.
- The daylight saving rule: two values are available, **Winter time** and **Summer time (+1hr)**.
- A town to identify a place.

To set the time and/or date of the **Origin clock**:

- 1 Press . Select **Office Tools**.
- 2 Select **World clock** and press **Options** .
- 3 Select **Edit Origin**.

- ④ Select **City**, enter the name of your town and press **OK**  to validate.  
Select **World Clock**, enter the time zone (GMT) and press **OK**  to validate.
- ⑤ Select **Daylight saving rule**, select **Winter time** or **Summer time (+1 hr)** and press **Select**  to validate.  
Then press **End**  to validate the time settings.
- ⑥ Select **Date & time**, enter the date in the format shown and press **OK**  to validate. Enter the time and press **OK**  to validate. (If required use  and .
- ⑦ Press **Exit**  or  to return to the standby display.

To set the secondary time,

- ① Press . Select **Office Tools**.
- ② Select **World clock** and press **Options** .
- ③ Select **Edit Secondary**.
- ④ Follow the instructions as point 4 above.

To switch between the two clocks:


- ① Press . Select **Office Tools**.
- ② Select **World clock** and press **Options** .
- ③ Select **Swap**. The secondary clock becomes the Origin/mobile clock and the Origin clock becomes the secondary one.  
An information message is displayed after swapping.
- ④ Press **Exit**  or  to return to the standby display.

## Unanswered call, voice mail, new SMS message, Inbox and Push indicators

- If some received calls remain unanswered,  will be displayed. Press **Read**  to view the callers' numbers if available and the date and time the call was received. Unanswered call numbers will be stored in the unanswered calls log.
- When you receive notification that a voice message has been deposited in your voice mail box an alert tone will sound and  will appear in the display. Press **Call**  or **Read**  to view the message or press and hold **1** to speed - dial your voice mail message centre. It is network dependent.  
☒ If more than one indicator is shown, pressing "Read" will display a menu allowing you to choose between different items.
- When a new SMS message is received, an alert tone will sound and  will be displayed. Press **Read**  to view the new SMS inbox messages.  
If  is flashing you will have to delete at least one old received message to be able to receive new ones.

- When data (vCards or vCalendar) are received from the IrDA port,  will be displayed. Press **Read**  to view the new inbox information.
- When a new Push message is received,  will be displayed. Press **Read**  to view the new message. More detailed information are available on *Getting more out of your Eclipse*.

The display will show the quantity and type of messages:

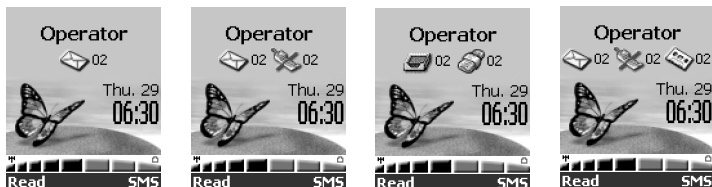

Press **Read**  to select the type of message to be read. Press **Select**  or  to view the message if more than one indicators are displayed.

## Modify graphics themes

Several themes are available to change the idle display (standby display):

- A classical one, called **Trium**.
- Two funny ones, called **Daisy** and **Woody**.
- A Night & Day one, called **Urban**.
- A business one, called **Lindbergh**.

To select a new graphic theme for your standby display:

- 1 Press  and select **Settings**.
- 2 Select **Graphics themes**. The menu of the graphics themes is displayed.
- 3 Select your desired graphics theme and press **Select** . An information screen indicates that your choice is correctly registered. Briefly press  to display the new idle screen.

### Night and day idle screen

The **Urban** theme changes twice a day. The *night* screen is set at 7 p.m. and the *day* screen is set at 7 a.m. (these parameters cannot be changed).

### Business idle screen

The **Lindbergh** screen takes into account the world clock. The two defined clocks are always displayed in this idle screen.

## Entering text

Some features and functions, e.g. storing names in memory or sending SMS text messages, require you to know how to enter and edit text in the display.

In the display this will be indicated by  in lower case mode and by  in upper case mode. Text and alphabet characters can then be entered or edited directly from the keypad.

There are two methods of entering text characters and numbers in the display. The Multitap or Multipress key method and the quicker intuitive method, called T9 text input, which involves fewer key presses than the multitap method.

### T9 (T9) text entry

A press on  will swap between T9 text entry and the Multitap method.

To enter text with T9:

- ❶ Press the key with the required letter once only.  
Do not be put off if the character you want is not immediately displayed.
- ❷ The "active" word changes as you type, so type to the end of the word.
- ❸ If your word is not displayed, press  for other matching words.
- ❹ If your word is not recognised, press  to swap to the multitap method to complete the word.
- ❺ Use  or  to locate the cursor in the text to insert characters or make corrections.

### Tips and Operation

| Key                                                                                            | Action                              |
|------------------------------------------------------------------------------------------------|-------------------------------------|
| Long press                                                                                     | Numbers                             |
|               | Shift - upper/lower case            |
| <b>Clear</b>  | Clear or backspace                  |
|               | Space                               |
|               | Another matching word               |
|               | Smart punctuation                   |
|               | Swap between T9 and Multitap method |

### Example

To enter **card** in the display:

- Press  and select **Messages**.
- Select **Write new**.
- Press , **M** appears.
- Press , **a** appears.
- Press , **ca** appears.
- Press , **car** appears.
- Press , **case** appears.

If the displayed word is not the one you want, press  as many times as necessary to view **card**.

- Press  to exit from this example and return to the standby display.

### The Multitap/Multipress method

This is the default method for "free text".

A press on  will swap between T9 text entry and the Multitap method.

A brief press on any key will display the first character associated with that key as well as show all the other available characters at the top of the display. The characters available, which are language dependent, are shown below:

| Key | Character                                                                                                                       |
|-----|---------------------------------------------------------------------------------------------------------------------------------|
|     | Lower case Upper case                                                                                                           |
| ①   | 1 . , - ' @ : ?                                                                                                                 |
| ②   | a b c 2 A B C 2                                                                                                                 |
| ③   | d e f 3 D E F 3                                                                                                                 |
| ④   | g h i 4 G H I 4                                                                                                                 |
| ⑤   | j k l 5 J K L 5                                                                                                                 |
| ⑥   | m n o 6 M N O 6                                                                                                                 |
| ⑦   | p q r s 7 P Q R S 7                                                                                                             |
| ⑧   | t u v 8 T U V 8                                                                                                                 |
| ⑨   | w x y z 9 W X Y Z 9                                                                                                             |
| ⑩   | 0 0                                                                                                                             |
| ⌘   | Short press swaps next letter between upper or lower case.<br>Long press swaps all next letters between upper or lower case.    |
| ⌘   | Short press, enters space.<br>Long press gives access to special characters.<br>( ) % ! ; " _ @ \$ + # * / & = < > ¿ ¥ \$ £ € i |
| ⬅ ⬆ | Short press moves the cursor through the text one place to the left or to the right.                                            |
| ↕   | Swap between Multitap/Multipress method and T9 text input                                                                       |

To enter text, press the key with the required character repeatedly until it appears in the display. A long press will enter the figure corresponding to the key. If two characters are on the same key wait for the display at top of screen to clear or press ⬆ before pressing the same key again. Correct mistakes by a short press on **Clear** (↵). A long press on this key will delete all the text.

Use ⬅ or ⬆ to locate the cursor in the text to insert characters or make corrections. A long press on ⌘ gives access to 23 special characters spread over one page. Display and selection of the characters is as follows:

| Specials Characters |          |
|---------------------|----------|
| ⬅                   | ) % ! ;  |
| "                   | _ @ \$ + |
| #                   | * / & =  |
| <                   | > ¿ ¥ \$ |
| £                   | € i      |
| Select              | ↔ Exit   |

To select and insert a character into the text:

- 1 Move the cursor using the four directions keys and the two side ones and select the wanted character.

② Press **Select** .

### Example

To enter **Card** in the display,

- Press  and select **Messages**.
- Select **Write new**.
- Press and hold  until  is displayed. Press ② briefly three times, **C** will appear in the display.
- Wait for the available characters to go from the display, press and hold  until  is displayed. Press ② briefly once, **a** will appear.
- Press ⑦ briefly three times, **r** will appear.
- Press ③ briefly once, **d** will appear. The word **Card** will now be in the display.
- Press  to exit from this example and return to the standby display.

## Messages (SMS)

Reading a received SMS message while in standby display

Press **Read**  to read the new received messages (inbox).

Reading stored SMS messages

- ① Press . Select **Messages**.
- ② Select **Inbox** to display the first message header.
- ③ Press  or select **Options**  / **Read text** to read the message text.

### Managing received and stored SMS messages

After reading the SMS message, press **Options**  for the following menu:

| Item                 | Function                                                                                     |
|----------------------|----------------------------------------------------------------------------------------------|
| <b>Read text</b>     | Displays the remainder of the text.                                                          |
| <b>Delete</b>        | Deletes the message.                                                                         |
| <b>Reply</b>         | Replies to the sender of the message.                                                        |
| <b>Reply (+text)</b> | Replies to the sender of the message with the initial text.                                  |
| <b>Forward</b>       | Forwards the message to another user.                                                        |
| <b>Forward to n</b>  | Forwards the current message to different addressees (5 maximum).                            |
| <b>Numbers</b>       | Stores or calls the number(s) contained in the SMS header or text (between quotation marks). |

## Sending a new SMS message to one addressee

- ❶ Press . Select **Messages**.
- ❷ Select **Write new**.
- ❸ You can either choose a draft text or enter the message text and press **OK** .  
A press on will swap between T9 (predictive) text entry and the Multitap (traditional) method.
- ❹ Select **Send**.
- ❺ Choose a message template and then enter the destination number or select **Names** to choose a number from a phonebook entry. Press to validate your choice. Press **OK** .  
Sent confirmation will be given.
- ❻ Select whether to store or send another message.
- ❼ Press **Exit** or to return to the standby display.

## Phonebook

### Storing names and telephone numbers

There are several ways to store numbers in the various phonebooks:

- Directly from the standby display,

- ❶ Enter the number. Press **Store** .

- Using the menu,

- ❶ Press . Select **Phone Book**. Select **Add name**.

- ❷ Select **Phone names** or **SIM names**.
- ❸ For each data item, select **Edit** and enter the requested value. Confirm each entry by pressing **OK** . Repeat the operation for all the data to be created or modified.
- ❹ Press **End** . **Stored** is displayed. Select **Yes** to store the new data and press **Select** .
- ❺ Press **Exit** or to return to the standby display.

- From other stored locations,

Numbers stored in the last dialled, received, unanswered, diary and SMS message locations can all be stored in the phonebook:

- ❶ Display a number from one of the above, press **Options** . Select **Store**.
- ❷ Follow the display instructions as for point 2 in the previous items.

During number and name entry a short press on Clear will clear the last character. A long press will clear the whole display.



## Managing card and phonebook numbers

After selecting **Phonebook** press **Options** (⌵) for the following menu:

| Item                  | Function                                                                                |
|-----------------------|-----------------------------------------------------------------------------------------|
| <b>Read</b>           | To access all the cards (SIM or Phone).                                                 |
| <b>Add name</b>       | To create a new entry.                                                                  |
| <b>Voice dialling</b> | To assign a voice pattern to a phone number.                                            |
| <b>Statistics</b>     | To access storage status.                                                               |
| <b>Groups</b>         | To manage all phone groups.                                                             |
| <b>My card</b>        | To read the personal card.                                                              |
| <b>Own numbers</b>    | To read the mobile station ISDN number (international number of the mobile subscriber). |
| <b>Fixed dialling</b> | To access the fixed dialling numbers.                                                   |

### Phonebook card options

After selecting a number from the phonebook press **Options** (⌵) for the following menu:

| Item                   | Function                                                             |
|------------------------|----------------------------------------------------------------------|
| <b>View</b>            | To modify the card content.                                          |
| <b>Delete</b>          | To delete the current card.                                          |
| <b>Copy</b>            | To copy the current card to SIM FDN, SIM ADN, and phone.             |
| <b>Move</b>            | To move the current card to SIM FDN, SIM ADN, and phone.             |
| <b>Group selection</b> | To show the FN display by filtering out only the cards in one group. |
| <b>Send by IrDA</b>    | To send the card content via an external port.                       |

### Dialling from memory

Any number stored in the SIM, or the phone memory, which can be re-called to the display can be dialled...

...from the phonebook

- ❶ Press (⏮) to enter the phonebook list.
- ❷ Use (⏮) or (⏭) to scroll to the number required;  
or  
Press ❷ **(ABC)** for quick access to names beginning with letters **A, B** or **C**;  
Press ❸ **(DEF)** for quick access to names beginning with letters **D, E** or **F**; etc. and then use (⏮) or (⏭) to scroll to the number required.
- ❸ Press (⏭).

...from the calls log memory list

The last 10 numbers dialled, the last 10 unanswered call numbers (if avail-

able) and the last 10 received answered numbers (if available) are stored by the phone in the calls log memory location menu:

- 1 Press . Select **Calls & Times**.
- 2 Select **Calls log**.
- 3 Select **Last dial**, **Unanswered** or **Received**.
- 4 Use or to scroll to the number required.
- 5 Press to dial the number.

## Voice dialling

Phone numbers can also be recalled with your voice. Please refer to *Getting More out of your Eclipse* to learn how to create a voice pattern and link it to a stored phone number.

To assign a voice pattern to a phone number,

- 1 Press . Select **Phonebook**.
- 2 Select **Voice dialling**.  
Select **New entry**. The phonebook is displayed, select a card.
- 3 Select a **Home**, **Work** or **Cellular** number. A voice dialling screen is displayed.
- 4 After the beep, say the name or another voice pattern to be associated with the selected phone number.
- 5 A second and a third screen (optional, not present if a second screen is enough) are displayed successively to enter the voice dialling pattern again.
- 6 Should the voice patterns match, **Stored** will appear in the display.
- 7 Press **Exit** to return to the voice dialling menu or to return to the standby display.

A voice pattern cannot be created on card creation.

To call a phone number using a voice pattern,

- 1 Press and hold .
- 2 You will then be asked to say the name. Pronounce the name as clearly as possible.

When answered proceed with the call in the normal way.

## Last dialled numbers

Quick access to the last 10 dialled numbers can also be obtained by pressing .

- 1 In the standby mode pressing will display a list of the last dialled numbers.
- 2 Use or to scroll to the number required.
- 3 Press to dial the number.

Last dialled numbers are stored in the phone, not in the SIM.

## Speed dialling

Phonebook numbers can be assigned to keys ② - ⑨ which when held down will dial those numbers.

To assign phonebook numbers to the speed dialling keys,

- ① Press . Select **Settings**.
- ② Select **Phone settings**. Select **Keys**.
- ③ Select **Speed Dial**.
- ④ Use or to scroll to the next key.
- ⑤ Select **Names** to choose the phonebook entry and press to validate your choice.
- ⑥ Press **Exit** or to return to the standby display.

To dial a number assigned to a speed dialling key,

Press and hold down the key (① - ⑨). The number will be recalled to the display and be dialled in the normal way.

By default, ① is always allocated to the voice mail number.

## Silent and vibrate alert modes

To avoid disturbing others you can silence the incoming ringing and alert tones.

### Turning on

- ① Press . Select **Settings**.
- ② Select **Tones**. Select **Alert tones**.
- ③ Select **Silent**, **Vibrate** or **Vibrate then ring**.

is shown in the display when the **Silent** alert mode feature is turned on.

is shown in the display when the **Vibrate**, **Vibrate & ring** or **Vibrate then ring** features are turned on.

### Turning off

- ① Press . Select **Settings**.
- ② Select **Tones**. Select **Alert tones**.
- ③ Select **Ring** or **Vibrate & ring**.

If the ring tone volume is set to 0 a warning message will appear in the display.

## Hands free mode

You can use the phone handsfree feature when you are attending a meeting (when you wish to share the conversation with the audience) or you are in your car.

### Turning the handsfree feature on

During conversation,

Press **Speak.on**  to turn the handsfree feature on during the calling process.

When receiving a call,

Press **Speak.on**  to accept the incoming call.

### Turning the handsfree feature off

Press **Speak.off** .

- ☒ The headset, when connected, disables the built-in hands-free function. If the headset is connected during a call in hands-free operation, the hands-free mode is automatically disabled and remains disabled when the headset is unplugged.

## Muting

During a call the microphone can be muted (turned off) to allow you to confer privately with people nearby without being heard by the other party.

### Turning the microphone off

- 1 Press **Options** .
- 2 Select **Mute**. A warning message will appear soon after in the display.  will appear on top of the display.

### Turning the microphone on


- 1 Press **Options** .
- 2 Select **Unmute**. A warning message will appear soon after in the display.  will disappear.

- ☒ The microphone is automatically restored on receiving a new call.

## Volume adjustment

To adjust the audio level received during conversation:

- 1 Use  or  to increase or decrease the volume through up to seven levels as shown on the display. Select **OK**  or wait for 2 seconds to confirm your choice.
- 2 Press **Exit** .

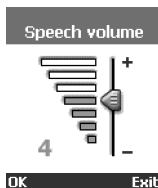

## Holding and retrieving a call

To put a call on hold during conversation:

Press .

To retrieve a call:

Press .

To make a second call when one call is on hold:

- ❶ Enter a number in the display. Press  to dial the number.
- ❷ After the second call has been established press  to swap between the two calls.
- ❸ To end either the current call or the held call select **End active** or **End held** in the **Options** menu. The remaining call is automatically retrieved.
- ❹ Press  to end all remaining calls.

The alternative way to hold, retrieve and make a second call during conversation is to use the **Options**  feature to display a menu of the actions described above. Scroll to the required option and press **Select**  or  (see also Multi-party or conference calls, page 30).

## Call waiting, swapping and multi-party conference calls

### GSM Services

Select **GSM Services** on the **Settings** menu for the following menu:

| Option                     | Description                                               |
|----------------------------|-----------------------------------------------------------|
| <b>Call diverting</b>      | To redirect an incoming call to another number.           |
| <b>Call waiting</b>        | To receive while engaged in a conversation.               |
| <b>Sending my ID</b>       | To send my identification to other parties.               |
| <b>Receiving caller ID</b> | To receive identification from incoming calls.            |
| <b>Network</b>             | To select networks in automatic or manual mode.           |
| <b>Call barring</b>        | To bar outgoing or incoming calls.                        |
| <b>Mode of operation</b>   | To select the mobile phone mode (modem or standard mode). |

### Call waiting

Call waiting is a network feature that allows you to receive a second incoming call when already engaged on a call. This means that you can put an existing call 'on hold' whilst you answer or make a second call.

To turn on or off the call waiting service:

- ❶ Press . Select **Settings**. Select **GSM Services**.

- 2 Select **Call waiting**.
- 3 Select **Activate** or **Cancel**. After some time (your request is sent to the network) the display will confirm your request.
- 4 Press **Exit** (⏮) or (⏭) to return to the standby display.

### Action when receiving a second call

When a second incoming call is received you will hear a 'double beep'; an animated phone icon will be displayed as well as the phone number if available. Either press (📞) to answer the call and put the first call on hold or press **Reject** (⏮) to reject the call and return a busy signal to the caller. Press (📞) to swap between the two connected calls.

During a two-call communication, select **Options** (ⓘ) for the following menu:

| Option                | Description                                                                             |
|-----------------------|-----------------------------------------------------------------------------------------|
| <b>Speaker on/off</b> | Lets you to activate or desactivate the hands free ("off" if the hands free is active). |
| <b>Auto DTMF</b>      | Allows a DTMF string to be entered in the active call only.                             |
| <b>Swap</b>           | Swaps between active and call on hold.                                                  |
| <b>Join</b>           | Joins active and call on hold to make a multi-party or conference call.                 |
| <b>Mute/Unmute</b>    | Turns the microphone on or off.                                                         |
| <b>End held</b>       | Ends the call on hold.                                                                  |
| <b>End active</b>     | Ends the active call and connects with the call on hold.                                |
| <b>End all</b>        | Ends all calls.                                                                         |

### Multi-party or conference calls

This feature gives you the ability to make or receive from 2 to 5 calls at the same time with all parties being able to hear and talk with each other.

- 1 Make and establish a call in the normal way and press (📞).
- 2 Enter another number in the display and press (📞). The first call will be put on hold whilst the second call becomes active.
- 3 Press **Options** (ⓘ) and select **Join** to active the multi-party or conference call.
- 4 Press **Options** (ⓘ) for the following menu:

| Option                 | Description                                                                              |
|------------------------|------------------------------------------------------------------------------------------|
| <b>Auto DTMF</b>       | Allows a DTMF string to be entered in the active call only.                              |
| <b>Private with</b>    | Allows you to hold a private conversation with one of the conference participants        |
| <b>Hold   Retrieve</b> | Holds or retrieves the conference call.                                                  |
| <b>Speaker on/off</b>  | Allows you to activate or deactivate the hands free ("off" if the hands free is active). |
| <b>Mute/Unmute</b>     | Turns the microphone on or off.                                                          |
| <b>End_X</b>           | Allows to end a call with one of the participants.                                       |
| <b>End all</b>         | Ends all the calls.                                                                      |

\* These items in the **Options** menu will appear if more than 2 calls are brought into the conference call.

Throughout the conference call the display will confirm and show the actions you have selected from the options menu.

- ☒ For alternate line service (ALS) subscribers conference calls cannot be made between Line 1 and Line 2.

## Diverting incoming calls (network service)

Call diverting is a service which diverts incoming calls, whether voice, fax or data, to another number.

To turn on call diverting:

- 1 Press . Select **Settings**.
- 2 Select **GSM Services**. Select **Call diverting**.
- 3 Use or to select the divert condition and validate by pressing **Select** or .
- 4 Select **Activate**.
- 5 Use or to choose between **Voice Mail**, **Names** or **Number**.
- 6 Press **Select** or to validate your selection. The display will confirm your request.
- 7 Press **Exit** or to return to the standby display.

To cancel all (multiple) diverts:

- 1 Press . Select **Settings**.
- 2 Select **GSM Services**. Select **Call diverting**.
- 3 Select **Cancel all**. Confirmation will be displayed.

- 4 Press **Exit**  or  to return to the standby display.

## Language selection

---

To select the language of your choice:

- 1 Press . Select **Settings**.
- 2 Select **Phone settings**. Select **Language**.
- 3 Use  or  to select a language from the displayed list. Press  to validate.
- 4 Press **Exit**  or  to return to the standby display.

## Softkeys - programming the softkeys

---

To program the softkeys:

- 1 Press . Select **Settings**.
- 2 Select **Phone settings**. Select **Keys**.
- 3 Select **Softkeys functions**.
- 4 Select **Left softkey** or **Right softkey**.
- 5 Press **Select**  on the softkey option of your choice.
- 6 Press **Exit**  or  to return to the standby display.

## Melodies download

---

Melodies are stored on a Web/WAP™ server, for mobile phones. In this server, melodies are available for phones other than Trium, as well as for Trium phones. This storage is Digiplug responsibility. You can access this site via Internet or WAP™. All chosen melodies are compressed and downloaded via SMS, using one message. Once the melody is completely received, it is decompressed. For each received melody, a screen gives you reception information. He can then install, play, or discard the melody.

The Eclipse mobile allows polyphonic sounds.

### Play a downloaded melody

- 1 On receipt of a melody, press **Options** . Select **Play**.  
A certain amount of information is displayed on the screen, while playing.
- 2 Press either **OK**  or **Stop**  to stop playing.



## Install a downloaded melody

- 1 On receipt of a melody, press **Options** . Then, select **Install**. If any space is left, the melody is automatically stored in the imported melodies directory. If there is not enough space left, you are asked to choose which melody to replace, among the set of modifiable melodies on the mobile.
- 2 Press **Exit**  to return to the standby display.

Once stored, a message is displayed. The melody can be played immediately and selected via the tones settings menu. Memory space is reserved for such downloads.

## Games

The availability and appearance of the games described hereafter are dependent upon the services provided by your network operator.

There are two games in the phone, **Rayman Bowling** and **Rayman Garden**. The **Options** item in the menu enables you to set the sound to on or off.

To select a game,

- 1 Press . Select **Games**.
- 2 Choose the game you wish to play and press **Select**  or .
- 3 Select **Instructions** on how to play the game and the controls to be used.
- 4 Select **Level** to play the game at your skill level.
- 5 Select **Play** to start the game.

If a call is received whilst a game is being played the normal received call display will be shown and the call is answered in the normal way. When the call is finished the game will be resumed.

To exit the games menu, press **Exit**  or press  to return to the standby display.

## Voice Memo

The Eclipse mobile lets you to record one or several memos of up to 120 seconds total. Each memo is a part of this stock of time, and may be of any duration, provided the global limit cannot exceed this limit of 120 seconds.

To record a voice memo or a phone conversation,

- ❶ Press and hold .
- ❷ A beep will sound and the display will show the recording time left. The recording will then start.  
A second beep will sound if the end of the recording time has been reached.
- ❸ Press **Stop**  or  to end the recording.

☒ If the memory is nearly full when starting a new recording you are asked to erase the previously recorded voice memo.

Select **Yes** to do so and proceed as for point 2 in the previous item.

Select **No** if you do not wish to delete the previously recorded memo.

When dealing with a phone conversation you can only record one person at a time.

To listen to the voice memo,

- ❶ Press  to play what has been recorded. The display will show the remaining recorded time.  
A beep will sound at the end of the memo.
- ❷ Press **Stop**  or  to return to the standby display.

☒ You can stop the memo playback at any time by pressing Stop.

To erase a memo,

- ❶ Press **Erase**  during memo playback or recording.
- ❷ Select **Yes** to confirm your choice. Confirmation will be displayed.
- ❸ Press **Exit**  to return to the standby display.

## WAP™

Either your phone is pre-programmed with the settings or you must enter them. See below to enter the settings. If you cannot access the settings, they are pre-programmed.

### Storing/editing the connection settings

(obtainable from your network operator or any WAP™ portal)

To create a new profile (up to 10 profiles can be stored):

- ❶ Press . Select **Internet**.
- ❷ Select **Profile list**. Choose an empty profile ([...]) and select **New** .
- ❸ Edit a profile name then press **OK**  to validate. **Stored** will appear. After a while, the menu associated with the new profile name is displayed.
- ❹ Select **Gateway settings**, and edit an **IP address** (mandatory)

- for the WAP™ gateway then press **OK**  to validate.
- 5 Select **Home page** and edit a URL address, then press **OK**  to validate.
  - 6 Select **Activate security** (**Never**, **Automatic** or **Always** requested for secure transactions such as mobile banking), then press **Select**  to validate.
  - 7 Select a **Normal port** corresponding to the connection or **Secure port** for a secure connection, then press **OK**  to validate.
  - 8 Select **Send Characteristics** to send or not the UA profile, to the remote server and press **Select**  to validate. Press **End** . Select **Yes**. **Stored** will appear.
  - 9 Select **Circuit access**, and edit a **Phone number** to dial up the WAP™, a **Login name**, used for identification (29 char. max.), a **Login password** used for access control (19 char. max.; each character will turn into a star (\*) after a short while), a **Speed** (9600 or 14400 bps), a **Mode** for transmission (digital or analog) to the remote modem, an **Auto-disconnect** duration (0 to 60 minutes) for automatic disconnect after a defined time with no activity on the WAP™ connection. Validate each entry by pressing **OK**  or **Select** . Press **End** . Select **Yes**. **Stored** will appear.
  - 10 Select **Packets access\***, and edit an **Access point name** from the GPRS network (the name is picked from a list managed in the mobile) and an **Auto-disconnect** duration. Press **OK** , every time, to validate. Press **End** . Select **Yes**. **Stored** will appear.
  - 11 Select **Connection mode** and select the mode of connection: **Circuit**, **Packet\*** or **Circuit+packet**. Press **Select**  to validate. Press **End** . Select **Yes**. **Stored** will appear.
  - 12 Select **Push parameters** and edit a **Push Proxy SMS centre**, a **Push Proxy SMS address** or **Push Proxy IP address** by selecting from a predefined list (except IP address): press **Names**  and select an entry from the list and press **OK**  to validate.
  - 13 Press **End** . **Stored** will appear. Select **Yes** to store the new data and press **Select** . The new profile appears in the profile list.

A WAP™ profile has to be selected for the preferred WAP™ access.

To select a WAP™ profile:

- 1 Press . Select **Internet**.
- 2 Select **Profile list**. Select the preferred profile and press **Options** .
- 3 Select **Select**.



Up to 20 bookmarks can be stored for frequent access.

\* GPRS availability is operator dependent

## Going online

To gain access to the online services offered by your network operator:

- 1 Press . Select **Internet**.
- 2 Select **Home page**.
- 3 **Connecting to** followed by your proxy name will be displayed whilst access is taking place.

Once connected you will be presented with your internet provider's or operator's choice of menu options. The  icon at the top of the display indicates a 'live' connection; the  icon indicates a WAP™ connection with GPRS (operator dependent).

To end the internet connection:

Press .

More detailed information on the mobile usage are available on *Getting more out of your Eclipse*.

## GSM man machine interface codes

The phone supports the standard GSM key sequences using the \* and # characters sent directly from the keypad to the network. These sequences are used to activate all the supplementary services provided by the network.

 Consult your service provider for a complete list.

# The menu (MMI) system

Use the round cursor key to access the menu system. Your menu options can vary. Some may not appear. This depends on your network operator and your subscription.

## Access to the menus


Press **1** to view all stored telephone numbers.

Press **2** to enter the main menu.

Hold down **Exit** / **End** or **Call**, to exit the menus (if no call is in progress).

## Menu map


Items in *italics* depend on your subscription and your network operator.

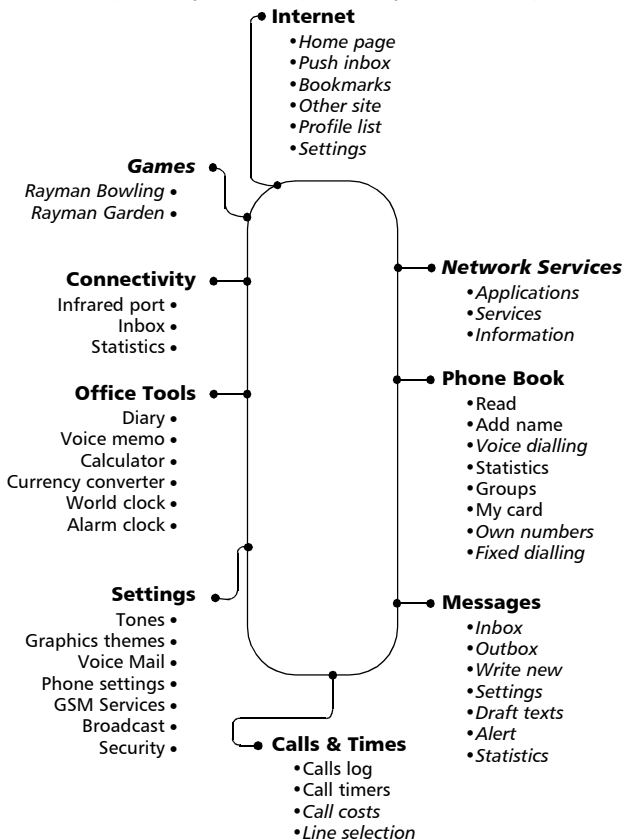

# Using the headset

## Connecting the headset

Insert the headset plug in the phone headset connector as shown below.

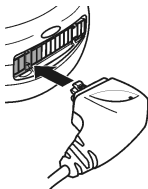

- ☑ While inserting the headset plug in the phone headset connector make sure the Trium logo (☺) appears on top. Otherwise the headset will not work properly.


## Using the headset

Place the headset earpiece in your ear.

The headset microphone is then at convenient level of operation.


You can answer, reject and end calls using ☺ or ☹ (see page 9).

Adjust the earpiece volume level using ⬆ and ⬇.

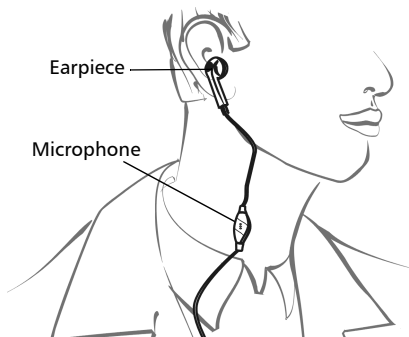

## Disconnecting the headset

Tilt the headset plug as shown below.

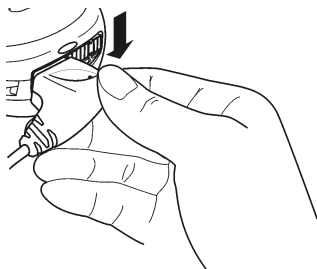

# Index

- A**  
 Alert tones ..... 27  
 Auto-disconnect ..... 35
- B**  
 Basic operations ..... 14  
     Calling ..... 17  
     Making a call ..... 17  
     Push ..... 19  
     Receiving a call ... 17  
     SMS ..... 19  
     Unanswered call . 19  
     Voice mail ..... 19  
 Battery ..... 13  
     Charging ..... 15  
     Fitting ..... 14  
     Low battery  
         warning ..... 15
- C**  
 Call  
     Conference ..... 30  
     Holding ..... 29  
     Multi-party ..... 30  
     Retrieving ..... 29  
     Waiting ..... 29  
 Call barring  
     Password ..... 12  
 Calling ..... 9, 17  
     Voice dialling ..... 26  
 Calls & Times  
     Calls log ..... 26  
 Card  
     Managing ..... 25  
 Care and  
     maintenance ..... 11  
 Circuit access ..... 35  
 Conference call ..... 30  
 Connection mode .... 35
- D**  
 Date setting ..... 18  
 Dialling  
     Calls Log  
         memory ..... 25  
     Phonebook ..... 25  
 Dialling from  
     memory ..... 25  
 Display ..... 8  
 Diverting ..... 31
- E**  
 Emergency calls ..... 13  
 Ending a call ..... 10, 17  
 Entering text ..... 20
- G**  
 Games ..... 33  
 Gateway settings ..... 34  
 General  
     Safety ..... 4  
 Getting started ..... 8  
 GPRS ..... 7, 8, 35  
 Graphic display icons .. 6  
 Graphics themes ..... 20  
 GSM man machine  
     interface codes ..... 36  
 GSM Services ..... 29  
     Call diverting ..... 31
- H**  
 Headset  
     Use ..... 38  
 Holding a call ..... 29  
 Home page ..... 35
- I**  
 Icons ..... 6  
 Incoming Calls  
     Diverting ..... 31  
 Internet ..... 9  
     Auto-disconnect .. 35  
     Circuit access ..... 35  
     Connection mode 35  
     Gateway settings 34  
     Going online ..... 36  
     Home page ... 35, 36  
     IP address ..... 34  
     Login name ..... 35  
     Login password ... 35  
     Mode ..... 35  
     Normal port ..... 35  
     Packets access ..... 35  
     Phone number .... 35  
     Profile list ..... 34, 35  
     Push parameters . 35  
     Send  
         Characteristics .. 35  
         Speed ..... 35  
     IP address ..... 34
- K**  
 Keypad lock ..... 9
- L**  
 Language selection .. 32  
 Last dialled numbers 26  
 Login name ..... 35  
 Login password ..... 35
- M**  
 Making a call ..... 9, 17  
 Managing SMS  
     messages ..... 23  
 Melodies download .. 32  
 Menu ..... 37  
 Menu map ..... 37  
 Messages . 9, 19, 20, 23  
     Inbox ..... 19, 23  
     Write new ..... 24  
 Mode ..... 35  
 Multi-party call ..... 30  
 Multipress text entry 21  
 Multitap text entry ... 21  
 Muting ..... 28
- N**  
 Normal port ..... 35
- O**  
 Office Tools  
     World clock .. 18, 19  
 Online connection .... 36

**P**

|                       |    |
|-----------------------|----|
| Packets access .....  | 35 |
| Phone Book            |    |
| Store .....           | 24 |
| Phone lock            |    |
| Code .....            | 12 |
| Phone number .....    | 35 |
| Phonebook .....       | 24 |
| Voice dialling .....  | 26 |
| Phonebook card        |    |
| options .....         | 25 |
| Phonebook numbers     |    |
| Managing .....        | 25 |
| PIN/PIN2 codes .....  | 12 |
| Programmable          |    |
| Softkeys .....        | 32 |
| Speed dialling .....  | 27 |
| PUK/PUK2 Codes .....  | 12 |
| Push parameters ..... | 35 |

**R**

|                         |        |
|-------------------------|--------|
| Rayman Bowling .....    | 33     |
| Rayman Garden .....     | 33     |
| Reading an SMS          |        |
| message .....           | 19, 23 |
| Receiving a call ...    | 10, 17 |
| Responsibility .....    | 11     |
| Retrieving a call ..... | 29     |
| Ring .....              | 27     |

**S**

|                          |               |
|--------------------------|---------------|
| Safety information ..... | 4             |
| Battery .....            | 13            |
| Care and                 |               |
| maintenance ...          | 11            |
| Disposing of             |               |
| waste                    |               |
| packaging .....          | 13            |
| Emergency calls ..       | 13            |
| Security codes ....      | 12            |
| Vehicle safety .....     | 11            |
| Your                     |               |
| responsibility ...       | 11            |
| Second call .....        | 30            |
| Security                 |               |
| Codes .....              | 12            |
| Send Characteristics ..  | 35            |
| Sending an SMS           |               |
| message .....            | 24            |
| Settings                 |               |
| GSM Services ..          | 29, 31        |
| Keys .....               | 27, 32        |
| Language .....           | 32            |
| Phone                    |               |
| settings ....            | 27, 32        |
| Tones .....              | 27            |
| Silent .....             | 27            |
| Silent alert mode .....  | 27            |
| SIM                      |               |
| Card .....               | 8, 14         |
| SMS .....                | 9, 19, 20, 23 |
| SMS messages             |               |
| Managing .....           | 23            |
| Reading .....            | 19, 23        |
| Sending .....            | 24            |
| Softkey                  |               |
| programming .....        | 32            |
| Speed .....              | 35            |
| Speed dialling .....     | 27            |
| Standby display .....    | 8             |
| Storing names and        |               |
| numbers .....            | 24            |

**T**

|                     |    |
|---------------------|----|
| T9 text entry ..... | 21 |
| Tegic (T9) .....    | 21 |
| Text entry          |    |
| Multipress mode ..  | 21 |
| Multitap mode ....  | 21 |
| T9 mode .....       | 21 |
| Time & date .....   | 18 |
| Time setting .....  | 18 |
| Turning             |    |
| Off .....           | 10 |
| On .....            | 8  |

**V**

|                         |    |
|-------------------------|----|
| Vehicle safety .....    | 11 |
| Vibrate .....           | 27 |
| Vibrate & ring .....    | 27 |
| Vibrate alert modes ..  | 27 |
| Vibrate then ring ..... | 27 |
| Voice dialling .....    | 26 |
| Calling .....           | 26 |
| Voice mail              |    |
| Password .....          | 12 |
| Volume adjustment ..    | 28 |

**W**

|                 |    |
|-----------------|----|
| WAP™ .....      | 34 |
| Waste packaging |    |
| Disposing ..... | 13 |





This guide describes the operation of the Trium dual band GSM/GPRS telephone Eclipse.

Edition 1, 2001. © Mitsubishi Electric Telecom Europe, 2002


RaymanBowling and RaymanGarden are published by Ludigames. Ludigames and Ludigames logo are trademarks of Ludigames S.A. © 2001 Ludigames.

Rayman is a trademark of Ubi Soft Entertainment. Rayman logo and character is a trademark of Ubi Soft Entertainment.

Whilst every effort has been made to ensure the accuracy of the instructions contained in this guide, Mitsubishi Electric reserves the right to make improvements and changes to the product described in this guide and/or to the guide itself, without prior notice.

## Menu map

---

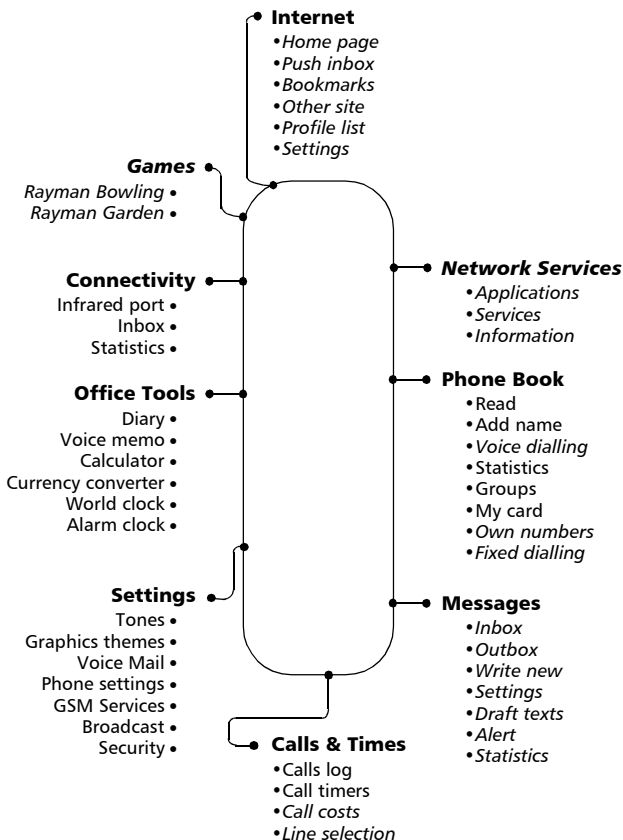

Note: Items in italics depend on your subscription and your network operator.

# Table of contents

|                                                                     |           |                                                                                                |           |
|---------------------------------------------------------------------|-----------|------------------------------------------------------------------------------------------------|-----------|
| <b>1. Network Services.....</b>                                     | <b>4</b>  | <b>4. Calls &amp; Times .....</b>                                                              | <b>18</b> |
| SIM application tool kit .....                                      | 4         | Calls log .....                                                                                | 18        |
| SDN numbers stored in the<br>SIM .....                              | 4         | Call times .....                                                                               | 18        |
| Information numbers .....                                           | 4         |                                                                                                |           |
| <b>2. Phone Book.....</b>                                           | <b>5</b>  | <b>5. Settings .....</b>                                                                       | <b>23</b> |
| Storing names and telephone<br>numbers .....                        | 5         | Tones .....                                                                                    | 23        |
| Free space in the phonebooks ..                                     | 8         | Graphics themes .....                                                                          | 25        |
| Viewing and calling numbers<br>in the phonebook .....               | 8         | Voice mail .....                                                                               | 25        |
| Creating a group of cards .....                                     | 9         | Phone settings .....                                                                           | 26        |
| My Card data set .....                                              | 9         | GSM Services .....                                                                             | 30        |
| Own number display .....                                            | 10        | Broadcast - cell<br>broadcast (CB) messages .....                                              | 35        |
| Fixed dialling numbers<br>(FDN) .....                               | 10        | Security features .....                                                                        | 37        |
| Calling phone numbers<br>with your voice .....                      | 11        |                                                                                                |           |
| <b>3. Messages .....</b>                                            | <b>13</b> | <b>6. Office Tools .....</b>                                                                   | <b>41</b> |
| Reading a received SMS<br>message (in the standby<br>display) ..... | 13        | Diary .....                                                                                    | 41        |
| Reading stored SMS<br>messages .....                                | 13        | Voice memo .....                                                                               | 46        |
| Managing received and<br>stored SMS messages .....                  | 13        | Calculator .....                                                                               | 47        |
| Turning on or off the<br>message alert tone .....                   | 14        | Currency-converter .....                                                                       | 48        |
| Preparing the phone to<br>send SMS messages .....                   | 14        | World clock .....                                                                              | 48        |
| Creating a draft text .....                                         | 14        | Alarm clock .....                                                                              | 49        |
| Editing a draft text .....                                          | 15        |                                                                                                |           |
| Sending a new SMS<br>message to one addressee ...                   | 15        | <b>7. Connectivity.....</b>                                                                    | <b>51</b> |
| Sending a new SMS<br>message to several<br>addressees .....         | 15        | Infrared port .....                                                                            | 51        |
| Storing a new SMS message ...                                       | 15        | Inbox .....                                                                                    | 52        |
| Messages in the outbox .....                                        | 16        | Free space in the memory .....                                                                 | 52        |
| Status request on outbox<br>messages .....                          | 16        |                                                                                                |           |
| Re-usable message<br>templates .....                                | 17        | <b>8. Games.....</b>                                                                           | <b>53</b> |
| Storage consumption .....                                           | 17        |                                                                                                |           |
|                                                                     |           | <b>9. Internet/Wireless<br/>Application Protocol<br/>(WAP™) .....</b>                          | <b>54</b> |
|                                                                     |           | Creating and editing GPRS<br>access point names for<br>WAP™ connections .....                  | 54        |
|                                                                     |           | Storing/editing the<br>connection settings<br>(obtainable from your<br>network operator) ..... | 55        |
|                                                                     |           | Selecting a preferred bearer ....                                                              | 56        |
|                                                                     |           | Personalising your<br>connection settings .....                                                | 56        |
|                                                                     |           | <b>10. Appendix .....</b>                                                                      | <b>62</b> |
|                                                                     |           | Glossary .....                                                                                 | 62        |
|                                                                     |           | Trouble shooting .....                                                                         | 63        |
|                                                                     |           | Error messages .....                                                                           | 64        |
|                                                                     |           | Guarantee .....                                                                                | 67        |

# Network Services



Your network operator may provide value added services and contact phone numbers. These services and phone numbers will be stored in your SIM and if available will modify the menu of the phone to be included under the item **Network serv.** at the beginning of the menu (contact your service provider for details).

There will be three possible ways in which an operator may present these value added services and contact phone numbers:

## **SIM application tool kit**

---

An automatic way to provide services related to your network and not to your phone. These services will be SIM dependent.

## **SDN numbers stored in the SIM**

---

Up to 32 numbers may be stored in the SIM which cannot be changed by you.

## **Information numbers**

---

A list or a menu to enable you to call network or information services offered by your network.

Some operators will be able to provide two of the above services on the same SIM in which case the **Network serv.** item in the main menu will provide two menu items, **Applications** and **Services** or **Information**.

# Phone Book



The phone and the SIM have areas of memory used for storing data (names, telephone numbers...) known as the phonebook.

The phone has the capacity to store up to 255 "extended" cards (called "phone phonebook cards"). These cards may contain the following information: family name, first name, company name, job title, icon, home phone number, work phone number, cellular phone number, fax phone number, voice dialling, address, e-mail and groups.

The phone also supports SIM cards with up to 255 memories (called "SIM phonebook cards") but the actual number and capacity is dependent upon the SIM itself. These cards contain the following information: name, number and voice dialling for both too. The SIM phonebook cannot store "extended" cards.

The phone and SIM memory locations are interconnected.

Both the SIM and the phone memories are searched when the read function is used.

## Storing names and telephone numbers

Names and numbers can be stored directly in the phonebook or copied from other stored areas such as from SMS messages, diary or last dialled number list, etc.

**It is advisable to store numbers in international format using the '+' prefix before the country code followed by the telephone number. This will ensure that the number can be dialled from within your home country as well as abroad.**

There are several ways to store numbers into the various phonebooks:

### Phone phonebook

- Directly from the standby display,

- 1 Enter the number. Press **Store** .
- 2 Select **Phone names**.
- 3 A list will be displayed. You have to select the item corresponding to the number you entered: **Home**, **Work**, **Cellular** or **Fax**.

- Using the menu,

- 1 Press . Select **Phone Book**.
- 2 Select **Add name**.
- 3 Select **Phone names**.

- 4 The following fields will be displayed:

| Field           | Purpose                                     |
|-----------------|---------------------------------------------|
| <b>Identity</b> | The identity of the card owner (obligatory) |
| <b>Numbers</b>  | The phone numbers of the owner              |
| <b>Address</b>  | The address of the owner                    |
| <b>E-mail</b>   | The e-mail address of the owner             |
| <b>Group</b>    | The groups assigned to the owner            |

- 5 Select the **Identity** field. The following fields will be displayed.

| Field               | Purpose                                                                                                                      |
|---------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>Family name</b>  | The family name of the card owner                                                                                            |
| <b>First name</b>   | The given name of the card owner                                                                                             |
| <b>Company name</b> | The company name to which the card owner belongs                                                                             |
| <b>Job title</b>    | The job title associated with the card owner                                                                                 |
| <b>Icon</b>         | The icon reference displayed when the owner card is displayed, when the owner receives a call or when the owner makes a call |

- ⑥ Enter the requested data. Confirm each entry by pressing **OK** .
- ⑦ Select an icon among 9 predefined icons, using the direction keys and confirm by pressing **OK** , or directly press the key (① - ⑨) corresponding to the required icon.  
In this example pressing ⑧ would select .



- ⑧ Press **OK**  to validate.
- ⑨ Select the **Numbers** field. The following fields will be displayed:

| Field           | Purpose                                |
|-----------------|----------------------------------------|
| <b>Home</b>     | The home phone number of the owner     |
| <b>Work</b>     | The work phone number of the owner     |
| <b>Cellular</b> | The cellular phone number of the owner |
| <b>Fax</b>      | The fax phone number of the owner      |

- ⑩ Enter the requested data. Confirm each entry by pressing **OK** .
- ⑪ Press **OK**  to validate.
- ⑫ Select the **Address** field. The following fields will be displayed:

| Field             | Purpose                      |
|-------------------|------------------------------|
| <b>Nr, Street</b> | The street name              |
| <b>P-O box</b>    | The Post Office box number   |
| <b>Zip code</b>   | The postal code              |
| <b>Locality</b>   | The locality name            |
| <b>State</b>      | The state or department name |
| <b>Country</b>    | The country name             |

- 13 Enter the requested data. Confirm each entry by pressing **OK** .
- 14 Press **OK**  to validate.
- 15 Select the E-mail field.
- 16 Enter the e-mail address. Confirm the entry by **OK** .
- 17 Select the **Groups** field (see "Creating a group of cards", p. 9).
- 18 Use  or  to scroll through the groups list.
- 19 Press **Select**  to associate the highlighted group to the card.
- 20 Press **End** , then select **Yes** to store the card with all its information in the phonebook. **Stored** will be briefly displayed.
- 21 When modifying the card, you should create a voice dialling pattern (for further details, see section *Calling phone numbers with your voice*, page 11):  
Select the **Voice dialling** field, then the requested phone number attached to the card (**Home**, **Work** or **Cellular**).  
Press **New**  to start the voice dialling pattern recording.  
You will then be asked to say the name at least twice. Pronounce the name as clearly as possible.  
Should the voice patterns match **Stored** will appear in the display.
- 22 Press **Exit**  or  to return to the standby display.

- From other stored locations,

Numbers stored in the last dialled, received, unanswered and SMS message locations can all be stored into the phonebook:

- 1 Display a number from one of the above, press **Options** .
- 2 Follow the display instructions as for point 2 in the previous item.

 During number and name entry a short press on Clear will clear the last character. A long press will clear the whole display.

## SIM phonebook

- Directly from the standby display,

- 1 Enter the number. Press **Store** .
- 2 Select **SIM names**.

- Using the menu,

- 1 Press . Select **Phone Book**.
- 2 Select **Add name**. Select **SIM names**.

- 3 Enter the name (if required) and press **OK** .
- 4 Enter (or confirm) the number and press **OK** .
- 5 Press **End** , then select **Yes** to store the card with all its information in the phonebook. **Stored** will be briefly displayed.
- 6 When modifying a card, you should create a voice pattern (for further details, see section *Calling phone numbers with your voice*, page 11):

Select the **Voice dialling** field.

Press **New**  to start the voice dialling pattern recording.

You will then be asked to say the name at least twice. Pronounce the name as clearly as possible.

Should the voice patterns match **Stored** will appear in the display.

**7** Press **Exit**  or  to return to the standby display.

- From other stored locations,

Numbers stored in the last dialled, received, unanswered and SMS message locations can all be stored into the phonebook:

**1** Display a number from one of the above, press **Options** .

**2** Follow the display instructions as for point 2 in the previous item.

 During number and name entry a short press on Clear will clear the last character. A long press will clear the whole display.

The characters \*, +, P (pause), # and \_ can be stored together with numbers. If the SIM or phone's memory is full a warning message will be displayed when selecting the phonebook.

## Free space in the phonebooks

To see how many empty phonebook spaces remain in the SIM or the phone,

**1** Press . Select **Phone Book**.

**2** Select **Statistics** and use  or  to display the remaining memories in the phone or SIM.

**3** Press **Exit**  or  to return to the standby display.

 If available the free memories in the FDN list will also be shown.

## Viewing and calling numbers in the phonebook

Phonebook entries can be recalled into the display to be edited, deleted, copied, moved or called to or from either the phone or SIM. There are two ways to view and call numbers in the phonebook:

- Directly from the standby display,

**1** Press  to display the phonebook list, then scroll to the desired number.

**2** Press .

- Using the menu,

**1** Press  and select **Phone Book**.

**2** Select **Read** to display the phonebook list, then scroll to the desired number.

**3** To access the required name :

- either use  or  to navigate line by line,



- or press and hold  or  to navigate quickly line by line,
- or press a numeric key to access the different letters associated to the key. For example, a first name beginning with "B" is selected when pressing  twice.

The list of phonebook entries will be displayed in alphabetical order and stored either in the SIM or the phone memory.

- 4** Press  to dial the number.

If several numbers are defined for this card, another screen allows selecting which number to call (**Home, Work, Cellular, Fax**).

Pressing **Options**  will display the following menu choices:

| Item                   | Function                                               |
|------------------------|--------------------------------------------------------|
| <b>View</b>            | Modifies the card content (any field)                  |
| <b>Delete</b>          | Deletes the current card                               |
| <b>Copy</b>            | Copies the current card to the SIMs or the phonebook   |
| <b>Move</b>            | Moves the current card to the SIMs or the phonebook    |
| <b>Group selection</b> | Only displays the cards that belong to one group       |
| <b>Send by IrDA</b>    | Sends the card content via an external port: IrDA port |

- 5** Press **Exit**  or  to return to the standby display.

## Creating a group of cards

Groups of cards can be defined for the phonebook. This feature allows to display only the cards that belong to a selected group.

To create a group:

- 1** Press . Select **Phone Book**.
- 2** Select **Groups**. The groups list will be displayed.
- 3** Choose any blank template [...] and press **New** . The following items will be displayed:

| Item              | Function                                      |
|-------------------|-----------------------------------------------|
| <b>Group name</b> | The group name                                |
| <b>Melody</b>     | A melody chosen in the mobile set of melodies |

- 4** Enter or selected the requested data. Confirm the entry by pressing **OK** .
- 5** Press **End** , then select **Yes** to confirm data storage. **Stored** will be briefly displayed.
- 6** Press **Exit**  or  to return to the standby display.

Once created a selected group can be modified or deleted via **Options** .

## My Card data set

My Card is a specific storage where you can enter your personal data.

My Card contains all fields as a usual phone card, except the Groups and Voice dialling fields.

To enter My Card data set,

- 1 Press . Select **Phone Book**.
- 2 Select **My Card**. An empty phonebook card will be displayed.
- 3 Enter your personal data. (see section Storing names and telephone numbers, page 5).

This menu item allows displaying and updating My Card.

(My Card data set can also be sent by IrDA, from the standby display, by directly pressing ).

## Own number display

The phone can display your main 'Line 1' voice mobile number, the voice mobile number for Line 2 (Alternate Line Service) and your data and fax numbers (this is SIM dependent). The SIM stores these numbers. You can enter them manually and name them. Line 1 for example can be named 'Office' etc.

To view, name and edit your own number(s),

- 1 Press . Select **Phone Book**.
- 2 Select **Own numbers**. The mobile number for Line 1 will be displayed.
- 3 Use or to view line 2, data and fax numbers.
- 4 To add or edit a name or number press **Edit** , then enter the requested data and press **OK** to store.
- 5 Press **Exit** or to return to the standby display.

## Fixed dialling numbers (FDN)

Fixed dialling is a feature that restricts outgoing calls to 'fixed' numbers or 'prefixes' contained in SIMs that support this feature. When turned on, dialling numbers not in the FDN list will not be allowed. The maximum number of FDN numbers that can be stored is dependent upon the capacity of the SIM. Call diverting and sending SMS messages to numbers not in the FDN list will be prevented. Turning on or entering numbers into the FDN list is PIN 2 protected.

To turn on or off FDN operation,

- 1 Press . Select **Phone Book**.
- 2 Select **Fixed dialling**. Select **Status**.
- 3 Select **On** or **Off**. Enter the PIN2 number.
- 4 Press **OK** to validate and confirm the setting.

To view the numbers in the list,

- 1 Press . Select **Phone Book**.
- 2 Select **Fixed Dialling**.
- 3 Select **View** and use or to view all the entries. Pressing **Options** will allow you to edit, delete, copy or move numbers to the phone or SIM, as well as send by IrDA.

To enter, edit or delete numbers in the FDN list,

- 1 Press . Select **Phone Book**.

- ② Select **Fixed dialling**.
- ③ Select **Add new**. You will be prompted to enter the PIN2 number if it has not been entered yet. It is now possible to add new numbers as well as edit, delete, copy, move, as well as send by IrDA.

✓ Wild card spaces can be used with the numbers stored in the FDN list. For example the number +441707 278\_\_9 will allow calls to all numbers between 278009 to 278999 to be dialled.

The number can be edited and dialled in the standby display.

## Calling phone numbers with your voice

Phone numbers can also be recalled with your voice. This only applies to phone numbers stored in the phone or SIM memory.

To create a voice pattern for a phone number,

- ① Press . Select **Phone Book**.
- ② Select **Voice dialling**.
- ③ Select **New entry**. All name entries are displayed.
- ④ Use or to choose the required card and press **Select** . If there are many phone numbers attached to the card you chose (e.g. **Home**, **Work** or **Cellular**) you will be asked to choose one by pressing **Select** .
- ⑤ You will then be asked to say the name at least twice. Pronounce the name as clearly as possible. Should the voice patterns match **Stored** will appear in the display.
- ⑥ Press **Exit** or to return to the standby display.

✓ If the second or a third voice pattern does not match the first one Failed will appear in the display. If so, start the whole voice pattern creation all over again.

To view the voice dialling phone numbers list,

- ① Press . Select **Phone Book**.
- ② Select **Voice dialling**.
- ③ Select **List**.
- ④ Use or to view the requested entry. Pressing **Options** will allow you to listen to the voice pattern (**Play back**), to remove the phone number from the voice dialling list (**Erase**) or to create a new voice pattern (**Record**).
- ⑤ Press **Exit** or to return to the standby display.

To remove all phone numbers from the voice dialling list,

- 1 Press . Select **Phone Book**.
- 2 Select **Voice dialling**.
- 3 Select **Delete all**.
- 4 Press **Exit**  or  to return to the standby display.

To call a phone number using a voice pattern,

- 1 Press and hold .
- 2 You will then be asked to say the name. Pronounce the name as clearly as possible.
- 3 The dialled number together with the animated  icon will be shown in the display. When the call is connected a ringing tone will be heard in the earpiece. When answered proceed with the call in the normal manner, a call timer will be displayed during the call.

# Messages



The SMS message service enables you to send or receive short text messages of up to 160 characters to or from other mobile phones provided with the same capability. The messages are not sent directly to the other mobile phone but go via a message centre provided by your network operator. You can also store, edit and forward messages as well as saving any of the numbers they may contain.

## Reading a received SMS message (in the standby display)

When the phone receives an SMS message a new SMS alert tone will sound and  will be displayed. The message is automatically stored in the SIM. If  is flashing there is no more space in the SIM to store messages. Delete previous messages to make space for new ones.

Press **Read**  to read new messages (Inbox).

## Reading stored SMS messages

- ❶ Press . Select **Messages**.
- ❷ Select **Inbox** to display the first message header.
- ❸ Press  or select **Options** /**Read text** to read the message text.

It is now possible to read all stored messages. Use the arrow keys to scroll between pages or between messages. Unread messages are indicated by , previously read messages are shown by .

## Managing received and stored SMS messages

After reading the SMS message press **Options**  for the following menu:

| Item                  | Function                                                          |
|-----------------------|-------------------------------------------------------------------|
| <b>Read text</b>      | Displays the remainder of the text                                |
| <b>Delete</b>         | Deletes the message                                               |
| <b>Reply</b>          | Replies to the sender of the message                              |
| <b>Reply (+ text)</b> | Replies to the sender of the message with the initial text        |
| <b>Forward</b>        | Forwards the message to another user                              |
| <b>Forward to n</b>   | Forwards the current message to different addressees (5 maximum)  |
| <b>Numbers</b>        | Stores or calls the number(s) contained in the SMS header or text |

 The items of this menu may vary and are dependent upon the type of message received.

## Turning on or off the message alert tone

Each time a message is received a new SMS alert tone will sound. To turn on or off this tone,

- 1 Press . Select **Messages**.
- 2 Select **Alert**. Select **On** or **Off**.
- 3 Press **Exit** or to return to the standby display.

## Preparing the phone to send SMS messages

You can write and send text messages. Before doing so the networks message centre number (obtainable from your service provider) needs to be stored:

- 1 Press . Select **Messages**.
- 2 Select **Settings**.
- 3 Select **Message centre**.

If a number already appears it means that it was taken directly from the information stored in your SIM. If empty enter the number manually (in international format) or from a stored memory, then press **OK** .

- 4 Press **Exit** or to return to the standby display.

If required you can also choose the validity period, format, paid reply request and request a Delivery report. Default settings are assumed if not set.

| Option                 | Description                                                                         | Default |
|------------------------|-------------------------------------------------------------------------------------|---------|
| <b>Validity Period</b> | Time held at message centre. 12 hrs, 1 day, 2 days or Maximum (defined by operator) | Maximum |
| <b>Format</b>          | Selects format of message, text, voice, fax or pager                                | Text    |
| <b>Reply requested</b> | Selects the requested of a reply                                                    | Off     |
| <b>Delivery report</b> | Selects the request of a delivery report                                            | Off     |

## Creating a draft text

A set a 10 messages texts, to be defined by you and initially empty, may be used as text templates when entering messages text. Any of these texts can be of up to 50 characters, allowing common texts to be created. These messages texts are accessible when beginning writing a message. The draft texts are stored in the mobile memory.

To create a draft text,

- 1 Press . Select **Messages**.
- 2 Select **Draft texts**.
- 3 Choose any blank template ([...]) and press **Edit** .
- 4 Enter the draft text and press **OK** .
- 5 Press **Exit** or to return to the standby display.

## Editing a draft text

- ❶ Press . Select **Messages**.
- ❷ Select **Draft texts**.
- ❸ Select the draft text to wish to modify and press **Edit** .
- ❹ Edit the text and press **OK** .
- ❺ Press **Exit** or to return to the standby display.

## Sending a new SMS message to one addressee

- ❶ Press . Select **Messages**.
- ❷ Select **Write new**.
- ❸ You can either choose a draft text or enter the message text and press **OK** .
- ❹ Select **Send**.
- ❺ Choose a message template and then enter the destination number or select **Names** to choose a number from a phone-book entry.  
Press to validate your choice. Press **OK** .
- Sent confirmation will be given.
- ❻ Select whether to store or send the same message again.
- ❼ Press **Exit** or to return to the standby display.

## Sending a new SMS message to several addressees

- ❶ Press . Select **Messages**.
- ❷ Select **Write new**.
- ❸ You can either choose a draft text or enter the message text and press **OK** .
- ❹ Select **Multicast**.
- ❺ Choose a message template.  
Enter up to 5 destination numbers or select **Names** to choose up to 5 numbers in the phonebook.  
Press to validate your choice. Press **OK** .
- Sent confirmation will be given.
- ❻ Select whether to store or send the same message again.
- ❼ Press **Exit** or to return to the standby display.

## Storing a new SMS message

- ❶ Press . Select **Messages**.
- ❷ Select **Write new**.
- ❸ You can either choose a draft text or enter the message text and press **OK** .

- ④ Select **Store**.
- ⑤ Press **Exit** (⏏) or (⏏) to return to the standby display.

## Messages in the outbox

The outbox contains unsent draft messages, stored sent messages as well as sent but undelivered messages, identified by their headers. These messages can be selected from the outbox menu and can be modified and re-sent as new SMS messages in the normal way.

To select an outbox message,

- ① Press (⏏). Select **Messages**.
- ② Select **Outbox** and use (⏏) or (⏏) to scroll to the desired message. Messages will either be "transmitted" (⏏) or "to be sent" (⏏).
- ③ Press **Options** (⏏) to read, delete, send (or re-send) to one addressee, edit a sent message and send (or re-send) to several addressees (**Multicast**).
- ④ Follow the instructions displayed on the screen.

## Status request on outbox messages

If the status is requested on a delivered message the date and time of delivery may be shown. If the status is requested on a sent message a status request will be sent to the network (must be network supported). The network will answer by sending a status report (SR) back to the phone which can be acknowledged by pressing **OK** (⏏).

To action a status request on outbox messages,

- ① Press **Options** (⏏). The following menu will be displayed:

| Item             | Action                                                                                                                                                                                                                                                                                                                                                       |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Read text</b> | Reads the message text.                                                                                                                                                                                                                                                                                                                                      |
| <b>Delete</b>    | Deletes the message from the SIM.                                                                                                                                                                                                                                                                                                                            |
| <b>Status</b>    | Gets the status of a sent message, if a status associated to the message is stored in the SIM. If no status is known, this one is directly requested to the network.<br>Note: Even if a status is requested, the answer is not immediately sent by the network and will be received at any time. In some cases, this option is not supported by the network. |
| <b>Send</b>      | Sends or re-sends a message sent with or without text modification.<br>Note: The message parameters are requested if some are missing (templates or not).                                                                                                                                                                                                    |
| <b>Edit</b>      | Modifies the current message.                                                                                                                                                                                                                                                                                                                                |
| <b>Multicast</b> | Same as the <b>Send</b> option, but several destination numbers can be entered.                                                                                                                                                                                                                                                                              |

- ② Select the action required.



## Re-usable message templates

---

If your network operator provide SIMs that allow users to store pre-programmed message templates, then **Msg templates** will appear in the **Messages - Settings** menu. Templates are sets of pre-programmed settings to be used when sending messages. Each of these templates can be given a name for easy identification and can be selected and used whenever required.

To create a message template,

- ❶ Press . Select **Messages**. Select **Settings**.
- ❷ Select **Msg templates**. Choose any blank template ([...]).
- ❸ The display will prompt you to enter the template Name, Msg Centre number, Validity period and Format.

Default settings for pay reply and status are assumed 'off' unless set. If only one template is set it is automatically used by default. If more than one template is programmed any one can be selected for use when sending new messages.

## Storage consumption

---

The storage usage for SMS messages can be consulted.

To know the number of messages stored and the total space available,

- ❶ Press . Select **Messages**.
- ❷ Select **Statistics**. Press **More...** .
- ❸ Use  or  to view all the SMS storage information (**New, Read, Sent, To send**).
- ❹ Press **Exit**  or  to return to the standby display.

# Calls & Times



Access the **Calls & Times** menu to check the details of individual incoming and outgoing calls, the duration of the last call or the total time for all previous calls.

## Calls log

This feature stores details (identity, time and date and call duration) of the last 10 numbers dialled, the last 10 unanswered calls and the last 10 received calls. The call logs are common for both Line 1 and Line 2.

- 1 Press . Select **Calls & Times**.
- 2 Select **Calls log**.
- 3 Select **Last dial**, **Unanswered** or **Received**.
- 4 Use or to scroll through the call lists.

The last number dialled or received is displayed first. For unanswered and received calls if the calling parties number is known it will be shown. Otherwise **Unknown number** will be displayed.

Pressing on a highlighted number will call that number.

Pressing **Options** will give access to the following menu:

| Item              | Action                                                                                      |
|-------------------|---------------------------------------------------------------------------------------------|
| <b>Store</b>      | Stores the number into phonebook                                                            |
| <b>Delete</b>     | Deletes the entry                                                                           |
| <b>Delete all</b> | Deletes all the entries                                                                     |
| <b>Edit</b>       | Edits the displayed number                                                                  |
| <b>Details</b>    | Views the details - name, number, time and date and call duration of the highlighted number |
| <b>Call</b>       | Makes a call to the number                                                                  |
| <b>Send SMS</b>   | Sends an SMS message to the corresponding phone number                                      |

Use or to select the required option and follow the display prompts.

Press **Exit** or to return to the standby display.

In the standby display 'One Touch' access for the 10 last dialled calls is available by pressing .

## Call times

**Call timers-Show** stores the duration of the last call, total accumulated time of all calls and total time for Line 1 and Line 2.

The **Details** sub-menu stores times for calls made and received through the subscription network and through other (national and international) networks.

- 1 Press . Select **Calls & Times**.
- 2 Select **Call timers**.
- 3 Select **Show**.

- 4** If the call timers have been reset (see Call timer - reset, page 20) the date of the last reset of the counters will briefly be displayed.

Use or to view all the timer information.

The call type and the accumulated times of outgoing and incoming calls will be displayed.



Pressing **Details** will display details of roaming and international calls etc.

Press or **Exit** to return to the previous display.

Press **Exit** or to return to the standby display.

If Line 2 is subscribed too 'All Calls' for Line 1 and Line 2 will be displayed separately.

## Balance information (subscription service only)

This is a subscription service provided by some networks and enables you to ask for your remaining airtime balance. This information is sent by the network.

Contact your service provider on availability and details.

- 1** Press . Select **Calls & Times**.
- 2** Select **Call timers**.
- 3** Select **Balance information**.
- 4** Select **Call** or **Set number**.

If **Call** is selected and the balance information number has already been entered a call will be made to the balance information centre. If a number has not been entered select **Set number** and enter the number. Press **OK** to store the number. Select **Call** to call the information centre number.

- 5** Press when the call is completed.

## Reminder - Call duration

A call duration reminder beeps to remind you of the duration of a call. It can be set in multiples of 1 minute (1 - 59 mins) intervals.

- 1** Press . Select **Calls & Times**.
- 2** Select **Call timers**.
- 3** Select **Reminder**.

- ④ Select **On** (or **Off**).
- ⑤ Select the period (between 1 and 59 mins).
- ⑥ Press **OK**  to validate the entry. Press **Exit**  or  to return to the standby display.

### Call timer - reset

This feature enables you to reset all the call timers. You will need the 4 digit lock code to operate this feature.

- ① Press . Select **Calls & Times**.
- ② Select **Call timers**.
- ③ Select **Reset**.
- ④ Select **Yes** or **No**.
- ⑤ Enter the phone lock code and press **OK** . The action will be confirmed.
- ⑥ Press **Exit**  or  to return to the standby display.

### Call costs - management (subscription service only)

Some networks offer an Advice of Charge (AoC) subscription service in which it is possible to see the cost of the last call made, the accumulated total cost of all calls and the remaining balance in units or currency of any 'cost limit' set by you.

To display these costs in the currency of your choice you must first select the currency and cost per unit otherwise call costs in units will be displayed.

To set currency and cost per unit,

- ① Press . Select **Calls & Times**.
- ② Select **Call costs**.
- ③ Select **Display cost type**.
- ④ Select **Currency**. The present currency settings will be displayed.
- ⑤ Press **Modify** . Enter the PIN 2 code and press **OK** .
- ⑥ Enter the abbreviated letters of the currency. Press **OK**  to validate.
- ⑦ Enter the cost per unit in the selected currency.  
Press **OK**  to validate.  
The display will confirm your selection.
- ⑧ Press **Exit**  or  to return to the standby display.

To set call cost type to units,

- ① Press . Select **Calls & Times**.
- ② Select **Call costs**.
- ③ Select **Display cost type**.

- ④ Select **Units**.
- ⑤ Press **Exit**  or  to return to the standby display.

 When the cost type is set to units the credit limit and the remaining credit are shown in units.

### Setting the credit limit - in units or currency

After setting the currency and cost per unit, if required and available on your subscription, you are also able to set a credit limit in units or an amount in the currency of your choice. When the credit limit is reached the phone will be prevented from making and receiving all chargeable calls. This will not prevent the phone from making emergency calls.

- ① Press . Select **Calls & Times**.
- ② Select **Call costs**.
- ③ Select **Credit Limit**. The display will show the present credit limit setting.
- ④ Press **Edit** . Enter the PIN 2 code and press **OK** .
- ⑤ Enter the credit limit (use  to enter a decimal point). Press **OK**  to validate.
- ⑥ Press **Exit**  or  to return to the standby display.

 When a credit limit is entered the selection from the 'Credit Limit' display will be Edit or Set No Limit.

### Show costs

- ① Press . Select **Calls & Times**.
- ② Select **Call costs**.
- ③ Select **Show**.
- ④ Use  or  to display the cost of the **Last Call**, **All Calls** and the **Remaining credits**.
- ⑤ Press **Exit**  or  to return to the standby display.

 The remaining credit is shown in either units or currency as set by Cost Type menu above.

### Call costs - resetting all costs to zero

To reset all the call costs to zero,

- ① Press . Select **Calls & Times**.
- ② Select **Call costs**.
- ③ Select **Reset**.
- ④ Select **Yes** to reset the costs or **No** to exit.  
If **Yes** is selected, enter the PIN 2 number and press **OK** . **All Costs Reset** will briefly be displayed.
- ⑤ Press **Exit**  or  to return to the standby display.

## Alternate line service - selecting line 2 (subscription service)

Some GSM 1800 operators support the use of a second line for users. You can have two mobile phone numbers e.g. a business and a personal line. To select the line for outgoing calls,

- ❶ Press . Select **Calls & Times**.
- ❷ Select **Line selection**.  
The current line selection will be displayed.
- ❸ Use  or  to scroll to the line required and press **Select**   
or  to validate your choice.
- ❹ Press **Exit**  or  to return to the standby display.

☒ Names can be given to Line 1 (Office) and Line 2 (Home) for example. Refer to the Own Number menu (page 10) for details. Whichever line is selected to make outgoing calls, incoming calls are still able to be received on either line.

# Settings

## Tones



### Alert mode

To avoid disturbing others you can turn off the audible incoming ring tone as well as all alert and alarm tones from the **Alert tones** menu.

- ☒ If you choose the 'Vibrate' or 'Vibrate then ring' option, the vibrating option replaces all the alert and alarm tones.

To modify the alert mode,

- 1 Press **⏮**. Select **Settings**.
- 2 Select **Tones**.
- 3 Select **Alert tones**.
- 4 Select **Ring, Silent, Vibrate, Vibrate & ring** or **Vibrate then ring** to validate your choice.
- 5 Press **Exit** **⏮** or **⏭** to return to the standby display.

- ☒ You can access the Alert tones menu directly from the standby display, using **⏮**.

If you select Ring but the ring tone volume is off the icon **🔇** appears.

The ring tone volume off setting is saved when the phone is turned off.

When the phone is connected to either the Desk Top Charger, HF kit, CLA or AC adaptor the vibrator mode selection is temporarily inhibited and the phone will ring instead.

### Ring tone selection

You can choose the sound of the incoming ring tone from a selection of 30 ring tone melodies stored in the phone and downloaded melodies which can be stored depends on the memory left.

To hear your chosen ring tone melody, wait several seconds before confirming your choice. The melody will be played.

Ring tone selection is made through the **Settings** menu:

- 1 Press **⏮**. Select **Settings**.
- 2 Select **Tones**.
- 3 Select **Melodies**.
- 4 To help you identify incoming calls you can give the **Standard/Line 1** and **Line 2** (network dependent) calls as well as the **Alarm** different ring tones.  
Use **⏮** or **⏭** to highlight the required call type and press **⏮** to select it.
- 5 Use **⏮** or **⏭** to listen to the different ring tones. Press **⏮** to select the current tone.
- 6 Press **Exit** **⏮** or **⏭** to return to the standby display.

### Downloaded melodies

You can download melodies from the internet using the procedure described page 61.

The present feature proposes to see the list of these melodies and the memory status about their storage. You can delete a selected melody after acknowledgement.

To consult the melodies list:


- ➊ Press . Select **Settings**.
- ➋ Select **Tones**.
- ➌ Select **Download**. Select **List**. The list of imported melodies is displayed.
- ➍ Use or to select the melody of your choice. The melody is played after no user action during 2 seconds.  
To remove the selected memory, press **Delete** then confirm the deletion by **Yes**.
- ➎ Press **Exit** or to return to the standby display.

## Volume adjustments

The volume levels of the ring tone, key tones, alarm tones (alarm clock and low battery alarm) and the incoming audio can all be individually adjusted in the **Settings** menu:

- ➊ Press . Select **Settings**.
- ➋ Select **Tones**.
- ➌ Select **Volume**.
- ➍ Select **Ring, Keys, Conversation** or **Alarm**.

The display will confirm the selection naming the volume to be adjusted.

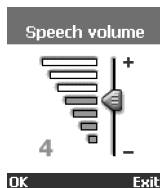

- ➎ Use or to adjust the setting.  
You can also use numeric key corresponding to the requested step: press on **4** sets the volume to **4**, presses on **7**, **8** or **9** sets the volume to **7**, press on **0** sets the volume to the minimal value (**1** for the speech and **0** for all others).
- ➏ Press **OK** to validate the setting.
- ➐ Press **Exit** or to return to the standby display.

During a call, you can adjust the conversation volume by using the volume keys or .

If the ring tone volume level is set to Off the warning icon will appear in the display.



## Ramping

Ramping is a feature that when turned on will cause the incoming ring tone to gradually increase to the maximum volume level if the call is not answered after the first ring.

- ❶ Press . Select **Settings**.
- ❷ Select **Tones**.
- ❸ Select **Volume**.
- ❹ Select **Ramping**.
- ❺ Select **On** or **Off**.
- ❻ Press **Exit**  or  to return to the standby display.

☒ When turned on the volume of the incoming ring tone will start from the current ring volume and rise to the maximum volume until answered.

## Graphics themes

Standby display themes can be selected in order to give your phone a personalised aspect.

To select a standby graphic theme.

- ❶ Press . Select **Settings**.
- ❷ Select **Graphics themes**.

Five graphics themes are available:

- a classical one called **Trium**,
- two funny ones called **Daisy** and **Woody**,
- a Night & Day one called **Urban**,
- a business one called **Lindbergh**.

The **Urban** theme changes twice a day. The *night* screen is set at 7 p.m. and the *day* screen is set at 7 a.m. (these parameters cannot be changed).

The **Lindbergh** theme is the only one which takes into account the world clock: it always displays two clocks.

- ❸ Use  or  to highlight the required graphic themes.
- ❹ Press **Select**  to validate your choice.
- ❺ Press **Exit**  or  to return to the standby display.

☒ Graphics themes cannot be downloaded via WAP™.

## Voice mail

Your network provider may offer a voice mail service which operates like an answering machine. Contact your service provider for details.

### Storing a voice mail centre number

If your SIM does not automatically include the voice mail centre number it will have to be manually stored:

- ❶ Press . Select **Settings**.
- ❷ Select **Voice Mail**.

- ③ Select **Number**. When prompted enter the number manually or from a stored memory.
- ④ Press **OK**  to validate your entry.
- ⑤ Press **Exit**  or  to return to the standby display.

☒ If you subscribe to the 'Line 2' service the voice mail centre number will need to be stored separately for that line. The voice mail number is automatically assigned to speed dial location number 1 (see Speed dialling on page 28).

## Turning on/off the voice mail alert tone

If you wish a tone to sound alerting you of the receipt of a voice mail message,

- ① Press . Select **Settings**.
- ② Select **Voice Mail**.
- ③ Select **Alert**. Select **On** or **Off**.
- ④ Press **Exit**  or  to return to the standby display.

## Calling the voice mail centre to check for messages

There are two ways:

- To dial the voice mail centre directly after the receipt of a message,  
Press and hold down ①.
- Alternatively,

- ① Press . Select **Settings**.
- ② Select **Voice Mail**.
- ③ Select **Call**.

Dialling will proceed as for a normal call.

☒ If a voice mail number has not been stored when Call is selected you will be asked to enter the voice mail number. Proceed as described in Storing a voice mail centre number, page 25.

## Phone settings

### Keypad lock

When keypad lock is turned on it prevents accidental operation of the keys and access into the menus. The key tones are also silenced and the backlight is deactivated.

Keypad lock is suspended during incoming calls and resumed when the call is terminated. Emergency calls can still be made. If a key is pressed the display will give a reminder that keypad lock is on.

☒ When the keypad is locked the backlight may be switched on by pressing the side shuttle key downwards.

To turn the keypad lock on and off,

- ① Press . Select **Settings**.
- ② Select **Phone settings**. Select **Keypad lock** to turn keypad lock on.
- ③ To unlock the keypad, press **Unlock**  then the **#** key.

### Language selection

All the display messages can be shown in several languages.

To select the language of your choice,

- ❶ Press . Select **Settings**.
- ❷ Select **Phone settings**. Select **Language**.
- ❸ Use or to select a language from the displayed list. Press **Select** to validate.
- ❹ Press **Exit** or to return to the standby display.

- ☒ To reset the phone to the language of the SIM enter \*#0000#.  
To reset the phone language to English enter \*#0044#.

## Backlight - setting

The backlight can be adjusted to suit the surrounding light conditions.

To modify the backlight,

- ❶ Press . Select **Settings**.
- ❷ Select **Phone settings**. Select **Display**.
- ❸ Select **Backlight**.
- ❹ Adjust the backlight using or .
- ❺ Press **OK** to validate the setting.
- ❻ Press **Exit** or to return to the standby display.

- ☒ When the phone is connected to either the Desk Top Charger, HF Car Kit, CLA or the AC Adaptor the backlight is always on.

## Display contrast

The contrast of the display can be adjusted to suit the surrounding light conditions.

To modify the display contrast,

- ❶ Press . Select **Settings**.
- ❷ Select **Phone settings**. Select **Display**.
- ❸ Select **Contrast**.
- ❹ Adjust the contrast using or .
- ❺ Press **OK** to validate the setting.
- ❻ Press **Exit** or to return to the standby display.

## Any key answer

This feature enables any key (except ) to be pressed to answer an incoming call.

- ❶ Press . Select **Settings**.
- ❷ Select **Phone settings**. Select **Keys**.
- ❸ Select **Any key answer**.
- ❹ Select **On** or **Off**.
- ❺ Press **Exit** or to return to the standby display.

## Softkeys - programming the softkeys (operator dependent)

The function of the softkeys can be changed to suit you. The available options are shown in the menu during selection.

To program a softkey,

- ➊ Press . Select **Settings**.
- ➋ Select **Phone settings**. Select **Keys**.
- ➌ Select **Softkeys functions**.
- ➍ Select **Left softkey** or **Right softkey**.
- ➎ Press **Select** on the softkey option of your choice.
- ➏ Press **Exit** or to return to the standby display.

(.....) in the display means that a previously SIM dependent or subscription service assigned to that softkey is no longer available. For example Line 2 selection.

## Speed dialling

Phonebook numbers can be assigned to keys ➋ - ➏ which when held down will dial those numbers. ➊ is reserved exclusively for the voice mail number and is assigned automatically when the voice mail number is stored (see Voice mail, page 25).

Numbers stored in the SIM and in the phone (fixed dialling numbers excepted) can be selected.

To assign phonebook numbers to the speed dialling keys,

- ➊ Press . Select **Settings**.
- ➋ Select **Phone settings**. Select **Keys**.
- ➌ Select **Speed Dial**.
- ➍ Use or to scroll to the next key.
- ➎ Select **Names** to choose the phonebook entry and press to validate your choice.
- ➏ Press **Exit** or to return to the standby display.

If a number which has been assigned to a speed dial key is deleted from the phonebook the corresponding number is automatically deleted from the speed dial key.

## Auto answer

This feature only works when the phone is connected to a handsfree car kit or headset and enables the phone to automatically answer an incoming call after approximately 5 seconds without having to press any keys.

- ➊ Press . Select **Settings**.
- ➋ Select **Phone settings**. Select **Auto features**.
- ➌ Select **Auto-answer**.
- ➍ Select **On** or **Off**.
- ➎ Press **Exit** or to return to the standby display.

## Auto retry

This feature enables the phone to automatically redial the number of a failed call, due to a system busy or unavailable signal from the network, for up to 10 times after which it will stop.

- ➊ Press . Select **Settings**.

- 2 Select **Phone settings**. Select **Auto features**.
- 3 Select **Auto-retry**.
- 4 Select **On** or **Off**.
- 5 Press **Exit** (⏮) or (⏭) to return to the standby display.

When activated, **Auto-retry** and a countdown timer to the next call attempt will appear in the display. An auto-retry warning tone will sound each time a new call attempt is made.

If the automatic redialling is successful proceed with the call as normal. Pressing **Exit** (⏮) or any key during the retrying process will cancel auto-retry and end the dialling process for that call.

### Auto Switch On/Off

This feature enables you to automatically program the phone to switch On or Off at pre-determined times.

To set a Switch On or Off time,

- 1 Press (P). Select **Settings**.
- 2 Select **Phone settings**. Select **Auto features**.
- 3 Select **Auto-switch-off** or **Auto-switch-on**.
- 4 Select **On** or **Off**.  
(If a previous time has been entered it will be displayed)
- 5 Enter a new time or accept the previous one. Press **OK** (⏮).  
**Stored** will briefly be displayed.
- 6 Press **Exit** (⏮) or (⏭) to return to the standby display.

At the switch-on time the phone comes on in the normal way. Enter the lock or PIN code if required.

If the phone is already on at the switch-on time no action occurs.

If the phone is set to switch-off, the display will show a warning message **Switch-off** in with a countdown timer showing the time to switch off.

Pressing **Exit** (⏮) will cancel the switch off process.

If the mobile is already off at the switch-off time no action occurs.

- ☒ The Auto Switch-off and Switch-on times cannot be the same. If a call is connected at the time of switch-off, the switch-off process is postponed until the call is terminated.

**Caution** - Remember to turn off the Switch-on alarm feature when boarding an aircraft where the use of mobile phones is not permitted and is illegal. Alternatively you can remove the battery after turning off the phone.

See the General safety warnings in *First Steps with your Eclipse*.

### Default (factory) settings

Use the **Settings** menu to return the phone settings back to the factory settings. This has no effect on the phonebook entries or phone lock code.

- 1 Press (P). Select **Settings**.

- 2 Select **Phone settings**. Select **Default settings**.
- 3 Select **Yes** or **No**.
- 4 Press **Exit** (⏮) or (⏭) to return to the standby display.

The following are the factory default settings:

| Feature                                              | Factory setting                     |
|------------------------------------------------------|-------------------------------------|
| <b>Alert Tones</b>                                   | Ring                                |
| <b>Ring Tones</b>                                    | Trium 3 (line 1)<br>Trium 3 (Alarm) |
| <b>Volumes, Ring, Key, Speech and Alarm.</b>         | Mid values                          |
| <b>Backlight and Contrast</b>                        | Mid value                           |
| <b>Any Key, Auto-Retry and Auto Answer features.</b> | Off                                 |
| <b>Ramping</b>                                       | Off                                 |
| <b>Graphics Theme</b>                                | Trium                               |

## GSM Services

### Diverting incoming calls (network service)

Call diverting is a service which diverts incoming calls, whether voice, fax or data, to another number.

To turn on a call divert,

- 1 Press (⏮). Select **Settings**.
- 2 Select **GSM Services**. Select **Call diverting** for the following menu:

| Divert options            | Action                                                                        |
|---------------------------|-------------------------------------------------------------------------------|
| <b>Always</b>             | Diverts all incoming voice calls unconditionally                              |
| <b>When not reachable</b> | Diverts all voice calls when the phone cannot be reached, i.e. out of service |
| <b>On no reply</b>        | Diverts all voice calls when the phone does not answer                        |
| <b>When busy</b>          | Diverts all voice calls when the phone is busy                                |
| <b>All conditions</b>     | Diverts all voice calls when Not Reachable, No Reply and When Busy            |
| <b>Cancel all</b>         | Cancels all divers                                                            |
| <b>All FAX calls</b>      | Diverts unconditionally all incoming fax calls                                |
| <b>All DATA calls</b>     | Diverts unconditionally all incoming data calls                               |

- 3 Use (⬆) or (⬇) to select the divert condition and validate by pressing **Select** (⏮) or (⏭).
- 4 Select **Activate**.
- 5 Use (⬆) or (⬇) to choose between **Voice Mail, Names** or **Number**.

- ⑥ Press **Select**  or  to validate your selection.

The display will confirm your request.

- ⑦ Press **Exit**  or  to return to the standby display.

- ☒ 1. If the 'On no reply' option is selected you will be requested to enter a delay period of 5, 15 or 30 seconds (network dependent).
- 2. Call diverts for both Line 1 and Line 2 must be set for each line. During call divert programming, only the line currently selected is affected by the call divert selected. To carry out a call divert on the other line you must select this other line first (menu Calls & Times - Line selection).

To turn off or check the status of call divert,

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Call diverting**.
- ③ Select from the divert options and press .
- ④ Select **Cancel** or **Status**.  
Your selection will be confirmed.
- ⑤ Press **Exit**  or  to return to the standby display.

To cancel all (multiple) diverts,

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Call diverting**.
- ③ Select **Cancel all**. Confirmation will be displayed.
- ④ Press **Exit**  or  to return to the standby display.

- ☒ This action cancels all voice diverts (for voice, faxes and data calls) for the line currently in use. To cancel call diverts for the other line you must select this other line first (menu Calls & Times - Line selection).

## Call waiting

This feature allows to receive new calls, while engaged in a conversation.

To activate call waiting,

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Call waiting**.
- ③ Select **Activate**. The network will return either **Activated** or **Check your request**.

- ☒ You can also cancel or check the service status.

## Caller Line Identity - showing/hiding your mobile number (network dependent)

Most networks allow the Caller Line Identity feature (CLI) i.e. the feature which shows the incoming number (ID) while receiving a call. Selecting **Receiving caller ID** will allow you to check the availability of such a feature.

### Receiving caller ID

This feature enables you to find out whether a network presents the ID of incoming calls.

- ① Press . Select **Settings**.

- 2 Select **GSM Services**. Select **Receiving caller ID**.  
The network will return either **Presentation available** or **Presentation unavailable**.
- 3 Press **Exit** (⏮) or (⏭) to return to the standby display.

## Sending my ID

On networks which allow caller line identity you can disable the sending of your own number, on a call by call basis, by adding #31# before the number you are calling. Alternatively you can ask your service operator to always disable the sending of your mobile number. In this case if you wish to reveal your number, on a call by call basis, you can do so by adding \*31# before the number you wish to call.

## Standard network setting

To reset the standard network setting for sending your mobile ID,

- 1 Press (⏮). Select **Settings**.
- 2 Select **GSM Services**. Select **Sending my ID**.
- 3 Select **My settings**.
- 4 Select **Preset**. The phone will reset to the network setting agreed with your service provider.
- 5 Press **Exit** (⏮) or (⏭) to return to the standby display.

## Hiding or showing your number

- 1 Press (⏮). Select **Settings**.
- 2 Select **GSM Services**. Select **Sending my ID**.
- 3 Select **My settings**.
- 4 Select **Hide my ID** or **Show my ID**.
- 5 Press **Exit** (⏮) or (⏭) to return to the standby display.

## Finding out your current ID setting

- 1 Press (⏮). Select **Settings**.
- 2 Select **GSM Services**. Select **Sending my ID**.
- 3 Select **Status**.  
The phone will display your current setting taking into account both network and phone settings.
- 4 Press **Exit** (⏮) or (⏭) to return to the standby display.

## Mode of operation (operator dependent)

This setting allows mobile operations to be the following: **Standard** or **Modem**.

- Standard mode

In this mode the mobile has the behaviour of a class B mobile: it tries to attach to GSM and GPRS networks. If the mobile succeeds attaching a GPRS network,  will appear in the standby display. In this mode the mobile can send and receive voice calls and packet data calls.

To set the mode of operations to **Standard**,

- 1 Press (⏮). Select **Settings**.



- ② Select **GSM Services**. Select **Mode of operation**.
- ③ Select **Standard**.
- ④ Press **Exit**  or  to return to the standby display.

- Modem mode

In this mode the mobile has the behaviour of a class C mobile: it tries to attach to GPRS networks only (and not to GSM networks). It can only receive packets data calls and voice calls are barred. This behaviour is the same whatever are the network capabilities. However if the GPRS services are lost, the mobile automatically returns to the Standard mode of operations.

To set the mode of operations to **Modem**,

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Mode of operation**.
- ③ Select **Modem**.
- ④ Press **Exit**  or  to return to the standby display.

## Network

When the phone is turned on, it automatically searches for the last network it was registered on (usually the home network). If this is not available, the phone will automatically search and select a network from the preferred network list contained in the SIM.

### Editing the preferred list

The phone contains a list of networks which can be selected and transferred to the preferred networks list stored in the SIM.

This list can be changed to suit your travel arrangements.

The order and name of the networks in the preferred networks list can be changed and edited.

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Network**.
- ③ Select **Preferred list**. A list of networks will be displayed.
- ④ Use  or  to view the list.
- ⑤ Press **Options**  to change it. The following items are displayed:

| Option                | Description                                                                                  |
|-----------------------|----------------------------------------------------------------------------------------------|
| <b>Modify by list</b> | Displays the general list of all known networks contained in the phone in alphabetical order |
| <b>Modify by code</b> | Edits or enters a network number (MCC MNC) if you know this information.                     |
| <b>Delete</b>         | Deletes an entry                                                                             |

- ⑥ Press **Select**  to confirm the selection.
- ⑦ Press **Exit**  or  to return to the standby display.

Your SIM may contain a forbidden list of networks which cannot be used.

To view the forbidden list or show the home network,

- 1 Press . Select **Settings**.
- 2 Select **GSM Services**. Select **Network**.
- 3 Select either **Forbidden** or **Home network**.  
A list of the forbidden networks or the home network will be displayed.
- 4 Press **Exit** or to return to the standby display.

### Selecting manual search

There may occasions when you wish to select a specific network, which has better coverage in your current location for example.

- 1 Press . Select **Settings**.
- 2 Select **GSM Services**. Select **Network**.
- 3 Select **Search**.
- 4 Select **Manual**. A confirmation screen and **Scanning for networks...** will be displayed.
- 5 Use or to select a network from the list shown.
- 6 Press to confirm the selection.  
**Requesting...** followed by the name of the network will be shown after which the phone will return to the standby display.

You cannot delete a network from the forbidden list. This list will be automatically updated when the manual network selection is performed.

### Selecting automatic search (normal default setting)

To perform an automatic search from the preferred list proceed as follows:

- 1 Press . Select **Settings**.
- 2 Select **GSM Services**. Select **Network**.
- 3 Select **Search**.
- 4 Select **Automatic**.
- 5 Press **Exit** or to return to the standby display.

### Call barring (network service)

This is a network service which allows you to stop different types of calls being made and received on the phone.

It requires the use of a network barring password available only from your service provider.

To put on a call bar,

- 1 Press . Select **Settings**.
- 2 Select **GSM Services**. Select **Call barring**.
- 3 Select **Outgoing calls** or **Incoming calls**. Choose from the following:

| Select                         | Meaning                                                                               |
|--------------------------------|---------------------------------------------------------------------------------------|
| <b>Outgoing - All outgoing</b> | All outgoing calls will be barred                                                     |
| <b>- Int'nal calls</b>         | All outgoing international calls only will be barred                                  |
| <b>- Int'nal excl. home</b>    | All outgoing international calls except to other subscribers within your home network |
| <b>Incoming - All incoming</b> | All incoming calls will be barred                                                     |
| <b>- Roaming only</b>          | All incoming calls when not on the home network                                       |

- ④ Select the option using  or . Press **Select** .
- ⑤ Select **Activate**. Enter the password and press **OK** .
- ⑥ Press **Exit**  or  to return to the standby display.

To take off or check the status of a call bar,

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Call barring**.
- ③ Use  or  to select the bar to be taken off (Cancel) or check the Status and press .
- If choosing to take off a call bar the password will be required.
- ④ Press **Exit**  or  to return to the standby display.

To change the password,

- ① Press . Select **Settings**.
- ② Select **GSM Services**. Select **Call barring**.
- ③ Select **Change password**.  
The old password will be requested followed by two requests to enter the new password. Confirmation will be displayed.
- ④ Press **Exit**  or  to return to the standby display.

## Broadcast - cell broadcast (CB) messages

These are messages broadcast by the networks to all GSM users and may provide general information about local area dialling codes, weather reports and traffic news etc. Each type of message is numbered enabling you to select the type of information you want to receive. Up to 5 different types of messages can be programmed into your selection list but only one can be displayed at any one time. There are 16 standard message types pre-programmed into the phone to select from. New message types can be programmed into the selection list using the 3 digit cell broadcast type number. Contact your service provider for details on the number and types of messages broadcast.

Before you can turn on the broadcast service you have to put at least one message type into the selection list.

## To enter a message type in the selection list

Up to 5 message types can be entered into the selection list.

- 1 Press . Select **Settings**.
- 2 Select **Broadcast**.
- 3 Select **Message types**. Press **Options** .
- 4 Select **Modify by list** (or **Modify by code** if type number is known).
- 5 Scroll to the message type required. Press **Select** to validate your selection. The display will confirm your choice.
- 6 Press **Options** again to select more message types from the list, enter a message type number if known or delete a message type.
- 7 Press **Exit** or to return to the standby display.

## To turn on or off the broadcast service

- 1 Press . Select **Settings**.
- 2 Select **Broadcast**.
- 3 Select **On/Off**.
- 4 Select **On** or **Off**.
- 5 Press **Exit** or to return to the standby display.

## Reading broadcast messages

Broadcast messages are shown in the standby display only and are suppressed during conversation or menu operation. A message can be up to 93 characters in length and cover several pages. Pages will automatically change approximately every five seconds or by a press on .

### Options during message display

A press on **Exit** will clear the CB currently displayed. Pressing will dial the number shown in the display within the message.

Pressing **Options** will display the following menu:

| Option               | Action                                                                                                              |
|----------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Delete</b>        | Delete the current message                                                                                          |
| <b>Delete All</b>    | Deletes all messages stored in the queue                                                                            |
| <b>Numbers</b>       | Displays all phone numbers found in the message text and allows to dial or store them in the scratchpad if required |
| <b>Broadcast Off</b> | Turns off cell broadcast                                                                                            |

## To turn on or off the alert tone

If required an alert tone can be turned on to 'beep' every time a new or updated broadcast message is received.

- 1 Press . Select **Settings**.
- 2 Select **Broadcast**.
- 3 Select **Alert**.
- 4 Select **On** or **Off**.

- 5 Press **Exit**  or  to return to the standby display.

To delete or edit a message from the list

Message types put into the selection list can be deleted and changed.

- 1 Press . Select **Settings**.
- 2 Select **Broadcast**.
- 3 Select **Message types**. Press **Options** .
- 4 Select **Modify by list**, **Modify by code** or **Delete**.
- 5 Press **Exit**  or  to return to the standby display.

## Broadcast language

All the broadcast messages can be shown in several languages.

To select the language of your choice,

- 1 Press . Select **Settings**.
- 2 Select **Broadcast**.
- 3 Select **Language**.
- 4 Use  or  to select a language from the displayed list. Press  to validate.
- 5 Press **Exit**  or  to return to the standby display.

## Security features

The security features described in this section protects your phone from unauthorised use.

When requested, enter the code, which appears as asterisks (\*) and press **OK** .

If you make a mistake press **Clear**  and enter the correct digit(s).

- ☒ Avoid using codes similar to emergency numbers such as 999 or 112 to prevent accidental dialling of these numbers.

**KEEP A RECORD OF YOUR CODES AND KEEP THEM IN A SAFE PLACE. FAILURE TO DO SO WILL CAUSE YOU CONSIDERABLE INCONVENIENCE.**

## Phone lock code

A phone lock code is supplied with the phone for security purposes. It prevents unauthorised access to the phone and to the WAP™ settings.

The factory setting is **0000**. We suggest that you reset this code and keep it in a safe place, separate from the phone.

The phone lock code is also required to reset the call timers. When enabled the code will be asked for each time the phone is turned on.

To change the phone lock code,

- 1 Press . Select **Settings**.
- 2 Select **Security**.
- 3 Select **Phone lock change** and follow the display prompts.
- 4 Press **OK**  to validate the new code.
- 5 Press **Exit**  or  to return to the standby display.

To turn on or off the phone lock code,

- 1 Press . Select **Settings**.
- 2 Select **Security**.
- 3 Select **Phone lock enable** or **Phone lock disable**.
- 4 The phone lock code will be requested to authorise your selection.
- 5 Press **Exit** or to return to the standby display.

When phone lock is on emergency calls can still be made.

## PIN code

Your SIM is provided with a 4-8 digit PIN code to protect it from unauthorised usage. When enabled the PIN code will be asked for each time the phone is turned on. If you enter the wrong PIN code three times in succession your SIM card will be blocked and you will need the 8 digit PUK code from your service provider (see page 39).

To turn on and off the PIN,

- 1 Press . Select **Settings**.
- 2 Select **Security**.  
If already off, **PIN enable** will be shown.  
If already on, **PIN disable** and **PIN change** will be shown.
- 3 Press **Select** and follow the display prompts.
- 4 Press **OK** to validate your entry. **PIN enabled** or **PIN disabled** briefly displayed will confirm your action.
- 5 Press **Exit** or to return to the standby display.

To change the PIN code (PIN must first be enabled),

- 1 Press . Select **Settings**.
- 2 Select **Security**.
- 3 Select **PIN change** and follow the display prompts.
- 4 Press **OK** to validate your new PIN. Confirmation will be displayed.
- 5 Press **Exit** or to return to the standby display.

## PIN2 code

The PIN2 code prevents unauthorised access to some features of the phone such as turning on or off FDN operations, modifying the FDN phonebook, setting calls costs to zero, modifying the costs display features. It can be changed but not turned on or off.

To change the PIN2 code,

- 1 Press . Select **Settings**.
- 2 Select **Security**.
- 3 Select **PIN2 change** and follow the display prompts.
- 4 Press **OK** to validate your new PIN2 code.
- 5 Press **Exit** or to return to the standby display.

## PUK code

The PUK (PIN unblock key) is an 8 digit code supplied by your service provider. It is used to 'unblock' a PIN whose code has been entered incorrectly three times. A PUK code cannot be changed.

When requested enter the PUK code and press **OK** (✓). You will then be asked to enter a new PIN code. Follow the display prompts to reset the PIN code.

- ☒ If you enter the wrong PUK code 10 times in succession your SIM card cannot be used again. Contact your service provider for a new card.

## PUK2 code

The PUK2 is an 8 digit code supplied by your service provider. It is used to unblock a PIN2 whose code has been entered incorrectly three times. A PUK2 code cannot be changed. When requested enter the PUK2 code. You will then be asked to enter a new PIN2 code. Follow the display prompts to reset the PIN2.

- ☒ If you enter the wrong PUK2 code 10 times in succession you will be unable to use the features requiring the PIN2 code. Contact your service provider for a new card.

## Call barring password

The call barring password is used to select the call barring levels outlined in the **GSM Services - Call barring** menu (see page 34). It is obtained from your service provider.

Refer to page 35 to change the password.

### Summary of code/password entry chart

| Password              | Length     | Number of tries allowed | If blocked or forgotten       |
|-----------------------|------------|-------------------------|-------------------------------|
| Unlock code           | 4 digits   | Unlimited               | Return phone to manufacturer  |
| PIN                   | 4-8 digits | 3 tries                 | Unblocked by use of PUK code  |
| PIN2                  | 4-8 digits | 3 tries                 | Unblocked by use of PUK2      |
| PUK                   | 8 digits   | 10 tries                | Contact your service provider |
| PUK2                  | 8 digits   | 10 tries                | Contact your service provider |
| Call barring password | 4 digits   | Network determined      | Contact your service provider |

## Certificates

Certificates are used for network exchange/exchange security. To display a certificate,

- ❶ Press .
- ❷ Select **Settings**. Select **Security**.
- ❸ Select **Certificate**. Enter the 4 digit lock code (default code **0000**) and press **OK** .
- ❹ Press **Options** , then select **View**.

The detail view is displayed and is composed as follows:

- A header which informs about the certificate's format and its storage location
- The certificate subject
- The certificate issuer
- The certificate validity dates (beginning and ending date)
- The certificate fingerprint

- ❺ Press **Exit**  or  to return to the standby display.



# Office Tools



The **Office Tools** menu contains a diary, a voice/phone recorder, a calculator and a currency-converter, a world clock and an alarm clock.

## Diary

The Diary is divided into three parts:

- The calendar which manages all the events
- The task list, which manages all the tasks
- The statistic feature which provides information about the memory capacity for the whole diary.

An event can be compared to an appointment. Conflicts are possible. Example: a meeting.

A task to be done can be compared to a task with no direct user implication (background task). Example: organizing a journey occurring.

### Calendar

The calendar enables you to store up to 100 timed calendar events to occur either once, daily, weekly or yearly. Entries can contain up to 50 characters, with or without a reminder alarm, set to the entry time or set to 15, 30, 60 minutes or any specific period before the entry time. Events can be viewed individually or on a scrolling weekly or monthly basis. Events can be sent through the IrDA port.

To enter an event,

- 1 Press . Select **Office Tools**.
- 2 Select **Diary**. Select **Calendar**. Monthly view or Today view is displayed according to event presence.
- 3 Press **Options** . Select **New event**.

An empty event card is displayed with the following fields:


- A title (up to 10 characters)
- A description (up to 50 characters)
- A starting date and time
- A ending date and time
- An audio alarm which can be activated
- A location
- A recurrence rule

- 4 Enter or select the requested data. Confirm each entry by pressing **OK** or **Select** .
- 5 Press **End** , then select **Yes** to confirm data storage.
- 6 Press **Exit** or to return to the standby display.

To view the current day's entries,

- 1 Press . Select **Office Tools**.
- 2 Select **Diary**. Select **Calendar**.

- 3 Select **Options** . Select **Today** to display the events of the day.

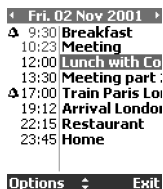

Each event is displayed on one line as follows :

- A graphic representation if an alarm has been set
- The event starting time
- The first part of the event title


The following actions are available:

| Actions                                                                                         | Purpose                                                             |
|-------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|
|                | Moves down to the next event or loops back to the first one         |
|                | Moves up to the previous event or loops to the last one             |
|  (short press) | Moves to the previous day                                           |
|  (long press)  | Scrolls to the previous day                                         |
|  (short press) | Moves to the next day                                               |
|  (long press)  | Scrolls to the next day                                             |
| <b>Options + Today</b>                                                                          | Returns to 'Daily view' with today                                  |
| <b>Options + Week view</b>                                                                      | Displays the 'Week view' of the displayed day                       |
| <b>Options + Month view</b>                                                                     | Displays the 'Month view' of the displayed day                      |
| <b>Options + New event</b>                                                                      | Creates a new event entry in the calendar                           |
| <b>Options + Modify event</b>                                                                   | Gives access to the event page to be read or edit the pointed event |
| <b>Options + Send event by IrDA</b>                                                             | Sends the selected event through IrDA                               |
| <b>Options + Delete event</b>                                                                   | Deletes the selected event                                          |
| <b>Options + Delete all day</b>                                                                 | Deletes all the events associated with the displayed day            |
| <b>Options + View Tasks</b>                                                                     | Gives access to the displayed day tasks view                        |

- 4 Press **Exit**  or  to return to the standby display.

To view weekly entries,

- ① Press . Select **Office Tools**.
- ② Select **Diary**. Select **Calendar**.
- ③ Select **Options** . Select **Week view** to display all the events scheduled for a selected week.

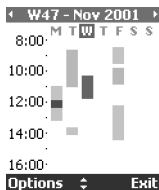

This screen displays an array containing the days of the week (horizontally) and the hours of the day (vertically).

It is divided into three parts, according to the time intervals: from midnight to 8 o'clock in the morning, from 8 o'clock in the morning to 4 o'clock in the afternoon and from 4 o'clock in the afternoon to midnight. Only one time interval is displayed. The two other parts are available on user request only.

All the events of the week are displayed in chronological order. Each event is displayed as a bar whose length is a representation of its duration, and whose colour depends on the activation of an alarm.

The following actions are available:

| Actions                          | Purpose                                                                         |
|----------------------------------|---------------------------------------------------------------------------------|
|                                  | Moves down in the next time interval                                            |
|                                  | Moves up in the next time interval                                              |
| (short press)                    | Moves to the previous day                                                       |
| (long press)                     | Scrolls to the previous week                                                    |
| (short press)                    | Moves to the next day                                                           |
| (long press)                     | Scrolls to the next week                                                        |
| <b>Options + Today</b>           | Returns to the 'Daily view' with today                                          |
| <b>Options + Day view</b>        | Displays the 'Daily view' of the pointed day                                    |
| <b>Options + Month view</b>      | Displays the 'Month view' of the displayed day                                  |
| <b>Options + New event</b>       | Creates a new event entry in the calendar                                       |
| <b>Options + Delete all week</b> | Deletes all the events associated with the displayed week                       |
| <b>Options + View Tasks</b>      | Gives access to the task view with the tasks associated with the displayed week |

- ④ Press **Exit** or to return to the standby display.

To view monthly entries,

- ❶ Press . Select **Office Tools**.
- ❷ Select **Diary**. Select **Calendar**.
- ❸ Select **Options** . Select **Month view** to display all the events scheduled for a selected month.



**Options** **Exit**

This screen displays the whole month in one array. The initials of the days are displayed horizontally, on top of the array.

If the selected month is the current one, today's number is rounded and coloured. If a day owns at least one event a graphical information is displayed. The graphic may be of two colours, depending on the presence of at least one event with an activated alarm.

The following actions are available:

| Actions                           | Purpose                                                                          |
|-----------------------------------|----------------------------------------------------------------------------------|
|                                   | Moves down in the month array                                                    |
|                                   | Moves up in the month array                                                      |
| (short press)                     | Moves to the previous day                                                        |
| (long press)                      | Scrolls to the previous month                                                    |
| (short press)                     | Moves to the next day                                                            |
| (long press)                      | Scrolls to the next month                                                        |
| <b>Options + Today</b>            | Returns to the 'Daily view' with selected day equal to today                     |
| <b>Options + Day view</b>         | Displays the 'Daily view' with the pointed day                                   |
| <b>Options + Week view</b>        | Displays the 'Weekly view' with the week of the pointed day                      |
| <b>Options + New event</b>        | Creates a new event entry in the calendar                                        |
| <b>Options + Delete all month</b> | Deletes all the events associated with the displayed month                       |
| <b>Options + View Tasks</b>       | Gives access to the task view with the tasks associated with the displayed month |

- ❹ Press **Exit** or to return to the standby display.

## Tasks list

This feature enables you to store up to 100 tasks to be done (Todo), scheduled with a beginning and a due date and time, with or without a reminder alarm set on the due time.

Tasks can be sent through the IrDA port.

To enter a new task,

- ❶ Press . Select **Office Tools**.
- ❷ Select **Diary** then select **Tasks list**. Select **New task**.

An empty task card is displayed with the following fields:

- A title (up to 10 characters)
- A description (up to 50 characters)
- A starting date and time
- A due date and time
- An audio alarm which can be activated on time

- ❸ Enter or select the requested data. Confirm each entry by pressing **OK** .
- ❹ Press **End** , then select **Yes** to confirm data storage.
- ❺ Press **Exit** or to return to standby display.

To display a tasks list,

- ❶ Press . Select **Office Tools**.
- ❷ Select **Diary** then select **Tasks list**. Select **Current tasks**. or **Elapsed tasks** (already done).

The tasks are displayed in a list, ordered according to their due date. If an alarm is activated for a task, is displayed.

The following actions are available through the **Options** softkey.

| Actions                  | Purpose                                                                      |
|--------------------------|------------------------------------------------------------------------------|
| <b>Modify task</b>       | Reads or edits the pointed task                                              |
| <b>Delete task</b>       | Deletes the pointed task                                                     |
| <b>Delete all tasks</b>  | Deletes all the tasks of the period (used to free the due tasks for example) |
| <b>Send task by IrDA</b> | Sends the selected task by IrDA                                              |
| <b>New task</b>          | Creates a new task entry in the diary                                        |

- ❸ Press **Exit** or to return to the standby display.

## Alarm notification

The alarm notification screen is displayed according to the alarm timer associated with an event or a task card. It displays information about the event or the task: the current date, the title, the starting date and time for the event. A ring is heard and the backlight is automatically switched on. If the user takes no action, the alarm is stopped after 60 seconds. It is automatically restarted, up to n times (n set by the operator) after a snooze time, until you acknowledge the alarm or up to the event/task ending time and date.

Press **Valid**  to acknowledge the alarm or press **Snooze**  to repeat the alarm after the snooze period.

## Statistics

This feature displays the memory state, for the calendar. The current numbers of existing events and tasks are given and a chart is displayed for the events and for the tasks.

Up to 100 events and 100 tasks are allowed.

The following actions are available through the **Options** softkey:

| Actions                  | Purpose                                                 |
|--------------------------|---------------------------------------------------------|
| <b>Delete events</b>     | Deletes all the events included in one period           |
| <b>Delete tasks</b>      | Deletes all the tasks included in one period            |
| <b>Delete all events</b> | Completely removes the file and creates a new empty one |
| <b>Delete all tasks</b>  | Completely removes the file and creates a new empty one |

**Caution** - Remember to remove the battery after turning your phone off when boarding an aircraft where the use of mobile phones is not permitted and is illegal.  
See the General safety warnings in *First steps with your Eclipse*.

## Voice memo

This feature allows you to record up to 120 seconds of spoken notes or phone conversations.

To record a voice memo or a phone conversation,

- 1 Press . Select **Office Tools**.
- 2 Select **Voice memo**. Select **Record**.

The display will show the recording time left. The recording will then start.

- 3 Press **Stop**  to end the recording.
- 4 Press **Exit**  or  to return to the standby display.

To listen to the voice memo,

- 1 Press . Select **Office Tools**.
- 2 Select **Voice memo**. Select **Play back** then press **Read** .

The display will show the remaining recorded time.

- 3 Press **Stop**  to end the play back.
- 4 Press **Exit**  or  to return to the standby display.

## Calculator

This feature enables you to perform simple calculations using + (plus), - (minus), \* (multiplication), / (division) and % (percentage) functions.

An integrated currency converter facility is also proposed. If the currency converter is initialised, numbers can be converted during calculations.

To use the calculator,

Press . Select **Office Tools**. Select **Calculator**.

The calculator icon () and **0** will be shown in the display. The phone is now ready to perform simple calculations.

Numbers are entered by pressing ① to ⑨. The +, -, \* and / symbols are entered using the multitap (for further details on the multitap text entry method please see *First Steps with your Eclipse*). Decimal points and the % symbol are entered using the multitap .

Press **Clear** during a calculation to correct an entry. Press = to obtain a result.

Example: **144 x 12 = 1728**

| Key sequence | Display     |
|--------------|-------------|
| ① ④ ④        | <b>144</b>  |
| * * *        | <b>*</b>    |
| ① ②          | <b>12</b>   |
| =            | <b>1728</b> |

Pressing = again after obtaining the first result will continue the calculation using the result and last operator (+, -, \*, /) symbol.

In the example, pressing = again will calculate,  $1728 \times 12 = 20736$

Pressing **Clear** will erase the result.

- ☒ The % function can only be used (entered) as the last operator during a calculation.  
For example  $250 - 10\% = 225$

Example using the currency converter £-€: **€ 154 + € 3 = £ 97.1374**

| Key sequence | Display              |
|--------------|----------------------|
|              | <b>£ &lt; &gt; €</b> |
| ① ⑤ ④ ①      | <b>95.2813</b>       |
| *            | <b>+</b>             |
| ③ ①          | <b>1.8561</b>        |
| =            | <b>97.1374</b>       |

In the example, pressing = again will calculate  $£ 97.1374 + € 3 = £ 98.9935$

- ☒ This example was made on a basis of the following exchange rate:  $€ 1 = £ 0.61871$ .

Enter another calculation, or press **Exit** or to return to the standby display. Calculations are kept if a call comes in during operation.

## Currency-converter

This useful feature converts currencies. To use the converter however the currencies and the exchange rate first have to be set up. The conversion is calculated on the per unit exchange rate of the second currency selected.

To select the currencies and the exchange rate,

- ❶ Press . Select **Office Tools**.
- ❷ Select **Currency converter**.
- ❸ Select **Settings**.
- ❹ Enter the first currency name (e.g. Dollar). Press **OK** .  
Enter the second currency name (e.g. Yen). Press **OK** .
- ❺ Enter the exchange rate using to enter a comma.  
Press **OK** to validate the entry. Press **End** , then select **Yes** to confirm data storage.
- ❻ Press **Exit** or to return to the standby display.

- ☒ If you want to use your Currency-converter as a Euro converter for participating currencies in the European Monetary Union ("Euroland currencies"), enter the complete Euro exchange rate with six significant figures. For example: € 1 = £ 0.61871.

To calculate the conversion between the chosen currencies,

- ❶ Press . Select **Office Tools**.
- ❷ Select **Currency converter**.
- ❸ Select one of the first two options.
- ❹ Enter the amount to be converted.  
Press to insert a comma, if needed.  
Press **OK** . The converted amount will be displayed.
- ❺ Press **Exit** or to return to the standby display.

- ☒ Conversion from one Euroland currency to another, or to non-Euroland currencies, should normally follow "triangulation" rules (i.e. conversion of local currency to Euros and then Euros to other local currencies). Your Currency-converter does not provide this possibility. The result you obtain will consequently be a close approximation.

## World clock

This feature allows you to reference the mobile according to the world time zone map, based on Greenwich Mean Time. A secondary clock is also available. This feature is useful for the Diary. In order to import or to export the calendar cards, events and task timetables have to be set according to Time zones. Both clocks are displayed in the same screen. The date and time and the city name are displayed for both of clocks.

### Clock setting

To set the origin clock,

- ❶ Press . Select **Office Tools**.
- ❷ Select **World clock**.



**③** Select **Options** . Select **Edit origin** or **Edit secondary**

The following fields are displayed:

- City: significant town associated with the time difference
- World clock: time difference with GMT (included in [-12:00; +14:00])
- Daylight saving rule. 2 values are available: **Winter time** and **Summer time (+1hr)**

The rule is one hour in advance during summer time. On each change the time is automatically updated for the origin and the secondary clocks

- Date and time: current date and time (only set in the origin clock)

**④** Enter or select the requested data. Confirm each entry by pressing **OK** .**⑤** Press **End** , then select **Yes** to confirm data storage.**⑥** Press **Exit**  or  to return to the standby display.

## Swap between the two clocks

This feature is used when travelling: you always have the local clock and you can swap between the two clocks.

To swap the clock,

**①** Press . Select **Office Tools**.**②** Select **World clock**.**③** Select **Options**. Select **Swap**.

An information message is displayed. The secondary clock becomes the origin/mobile clock and the origin clock becomes the secondary one.

**④** Press **Exit**  or  to return to the standby display.

## Alarm clock

This feature enables you to set a daily 'Reminder Alarm'.

To set a time and turn on the alarm,

**①** Press . Select **Office Tools**.**②** Select **Alarm clock** (If a previous alarm time has been entered this time will be displayed).**③** Select **On** and enter the alarm time (in 24 hour format) or press **OK**  to accept the displayed time. Confirmation will be displayed.**④** Press **Exit**  or  to return to the standby display.  will be displayed on top of the idle display.

☒ When 'on' the alarm will operate at the same time every day until turned off.

When the alarm time is reached an audible alert sounds for up to 1 minute and the LED will flash red. **Alarm clock** and a vibrating bell symbol will appear in the display together with the current time and the softkeys, **Valid.**  and **No ring** .

If the phone is off at the time of the alarm, the phone will automatically 'power on' and operate the audible and visual alerts described above. To use as a Reminder or Snooze Alarm,

Press **No ring** , or any other key (except **Valid.** ) to stop the alarm. The alarm icons remain in the display and the alarm will ring again 3 minutes later.  
or  
Press **Valid.**  to acknowledge and switch off the alarm.

If 'off' before the time of the alarm the phone remains 'on'. If the phone is locked or the PIN setting is on it remains in this locked condition until operated by you.

If the alarm is acknowledged but not validated the alarm indicators will remain in the display for up to 15 minutes after which time the phone will either turn off, or, if 'on' at the time of the alarm, will revert back to the normal standby display.

- ✓ 1. Until acknowledged the alarm will ring for 1 minute. Pressing any key (other than the Valid softkey) will stop the alarm sounding but not switch off the alarm, it will be repeated 3 minutes later. If the Valid softkey is not pressed after the 3rd (and final) time the alarm rings it will not be repeated but the phone remains on, in the alarm display mode, for up to 15 minutes after which it will revert back to the state it was in before the alarm time was reached.
- 2. If the phone is in a transitory state (during power off for example) at the time of an alarm it will be delayed until after the transitory state has finished.
- 3. If the alarm time is reached during a call a special Call in process alert beep will sound and visual alerts will appear every 3 minutes. The alarm can be validated in the normal way.
- 4. If the alarm time is reached during an outgoing, or incoming call setup sequence, the alarm is suspended until the call is established and the mobile behaves as in 3 above.
- 5. If the battery is detached within 15 minutes of the alarm time the alarm will sound immediately. If later than 15 minutes only the visual indicators will be shown. Press the Valid softkey to validate and stop the alarm.

To turn off the alarm,

- ➊ Press . Select **Office Tools**.
- ➋ Select **Alarm clock**.
- ➌ Select **Off**. Confirmation will be displayed.
- ➍ Press **Exit**  or  to return to the standby display.

**Caution** - Remember to turn off the alarm feature when boarding an aircraft where the use of a mobile phone is not permitted and is illegal. Alternatively you can remove the battery after turning off the phone. See the General safety warnings in *First steps with your Eclipse*.

# Connectivity



## Infrared port

The infrared port allows you to exchange data between your mobile and other devices (provided they have an infrared port).

To initiate a transfer via the infrared port, your mobile must be placed facing another infrared port before port opening starts.

The two ports can then be opened and synchronised. The requested transfer can then be performed. Objects (vCards e.g.) are transferred one by one.

### Opening the infrared port

Opening the infrared port allows you to receive information via this port. Once opened, the infrared port can be used for any kind of transfer. The infrared port is automatically disconnected after some time.

You have to open the infrared port if you want to receive data via your infrared port or if you want to transfer non-structured data via the infrared port (such as a fax or file transfer to the network for instance).

To open the infrared port,

- 1 Press . Select **Connectivity**.
- 2 Select **Infrared port**.
- 3 Select **Open**. Confirmation will be displayed. will be displayed on top of the standby display.

When the infrared port is open, objects can be received. When an object is received, the idle screen is masked by the new object reception status.

### Closing the infrared port

Closing the infrared port closes all infrared sessions (OBEX and IrCOMM sessions).

To close the infrared port,

- 1 Press . Select **Connectivity**.
- 2 Select **Infrared port**.
- 3 Select **Close**. Confirmation will be displayed.

### Transferring a phonebook card via the infrared port

You can transfer phonebook cards via the infrared port:

- 1 Place your mobile opposite the other device infrared port.
- 2 Open the other device infrared port.
- 3 Select the card you wish to transfer as explained in section *Viewing and calling numbers in the phonebook*, page 8.
- 4 Press **Options** . Select **Send by IrDA**. The infrared port will first be opened. The transfer will then be performed.
- 5 When the transfer is complete the phone returns to the phonebook card display.
- 6 Press **Exit** or to return to the standby display.

## Inbox

This feature allows the storing of data received from various entries: IrDA, WAP™, SMS.

The objects are queued in the inbox and can be retrieved by object type: Task card, Event card, Business card, Root certificate, JAVA™ files and other “undefined” (not defined for the mobile) files.

Specific dedicated downloads are not inserted in this queue (for example, for WAP™ provisioning using dedicated SMS, information goes directly to the target application and does not go through the inbox).

To display the inbox contents,

- ❶ Press . Select **Connectivity**.
- ❷ Select **Inbox**.

The list of all the files is displayed, in anti chronological order (the last files received are displayed first), with their associated icon and their own file extension. Five icons are defined, one for each file type, and one for all the other files.

The following actions are available through **Options** .

| Actions             | Purpose                                           |
|---------------------|---------------------------------------------------|
| <b>Delete</b>       | Deletes the pointed file                          |
| <b>Delete all</b>   | Deletes all the files                             |
| <b>Store</b>        | Stores the pointed file in its target application |
| <b>Details</b>      | Displays the details of the pointed file          |
| <b>Send by IrDA</b> | Sends by IrDA                                     |

- ❸ Press **Exit**  or  to return to the standby display.

## Free space in the memory

To consult the free space in the memory,

- ❶ Press . Select **Connectivity**.
- ❷ Select **Statistics**. A graphic displays the total size of the memory and the memory used.
- ❸ Press **Exit**  or  to return to the standby display.

# Games



The availability and appearance of the games described hereafter depend on the services provided by your network operator.

There are two games in the phone, **Rayman Bowling** and **Rayman Garden**.

To play a game,

- ❶ Press . Select **Games**.
- ❷ Choose the game you wish to play and press **Select** or .
- ❸ Select **Level** to choose the difficulty level.  
Select **High Scores** to view the best and last scores.  
Select **Parameters** to set if you wish sound effects or no sound and to select the volume level.  
Select **Instructions** for instructions on how to play the game and the controls to be used.
- ❹ Select **Play** to start the game.

If a call is received whilst a game is being played the normal received call display will be shown and the call is answered in the normal way. When the call is finished the game will be resumed.

To exit from the games menu,

- ❺ Press to return to the standby display.

# Internet/Wireless Application Protocol (WAP™)



The Eclipse has a WAP™ internet browser to access services, such as stock buying, news, sports, weather, TV listings etc., supplied by your operator and/or your internet provider. **The types of services offered depend on the internet provider and network operator.**

You must have a DATA subscription to access these services.

Also check with your network operator whether the connection settings have been pre-programmed into the phone prior to delivery or whether you have to manually enter and store the settings yourself.

In either case once the settings have been stored you can start using this feature as required and described below.

- ☑ Access to the connection settings may depend upon whether the settings have been pre-programmed into the phone prior to shipment from the factory. In some cases and to avoid errors these settings may be 'Locked' and not be user programmable.

## Creating and editing GPRS access point names for WAP™ connections\*

To create GPRS access point name dedicated to WAP™ connections (only possible if GPRS services are available in your part of the country and within your subscription),

- ➊ Press **Internet**.
- ➋ Select **Settings**. Select **Access point names**.
- ➌ The access points list appears. Select an empty entry ([...]) and press **New**.
- ➍ Enter the access point **Alias** and press **OK**.
- ➎ Enter the access point **Full name** and press **OK**.
- ➏ Enter the **Login name** for this access point and press **OK**.
- ➐ Enter the **Login password** for this access point (each character will turn into a star (\*) after a short while) and press **OK**.
- ➑ Press **End**, then select **Yes** to confirm data storage.
- ➒ Press **Exit** or **Back** to return to the standby display.

To modify GPRS access point dedicated to WAP™ connections,

- ➊ Press **Internet**.
- ➋ Select **Settings**. Select **Access point names**.
- ➌ The access points list appears. Select an entry and press **Options/Edit**.
- ➍ Edit the **Alias**, the **Full name**, the **Login name** and/or the **Login password**. Confirm each entry by pressing **OK**.
- ➎ Press **End**, then select **Yes** to confirm data storage.
- ➏ Press **Exit** or **Back** to return to the standby display.

---

\* GPRS availability is operator dependent

## Storing/editing the connection settings (obtainable from your network operator)

**Before proceeding and if you have not already done so please enter the current time and date as described on page 48.**

The profile list can contain up to 10 profiles.

To enter and store the profile details,

- 1 Press . Select **Internet**.
- 2 Select **Profile list**.
- 3 Select an empty profile ([...]) and press **New** .
- 4 Enter the **Proxy name** and press **OK** .
- 5 Select the **Gateway settings**.  
Enter the **IP address** and press **OK** .
- Enter the **Home page** address and press **OK** .
- Select the **Activate security** settings for the connection (**Never, Automatic or Always**) and press **Select** .
- Validate the **Normal port** address and press **OK** .
- Validate the **Secure port** address and press **OK** .
- Select the **Send characteristics** settings (**On or Off**) and press **Select** .
- Press **End** , then select **Yes** to confirm data storage.
- 6 Select the **Circuit access** settings.  
Enter the **Phone number** and press **OK** .
- Enter the **Login name** and press **OK** .
- Enter the **Login password**. Each character will turn into a star (\*) after a short while. Press **OK** .
- Select the transmission **Speed (9600 or 14400)** - if required - and press **Select** .
- Select the transmission **Mode (Numeric or Analog)** and press **Select** .
- Enter the **Automatic disconnection** time and press **OK** .
- Press **End** , then select **Yes** to confirm data storage.
- 7 Select the **Packets settings** \*.  
Choose a GPRS **Access point names** and press **Select** .
- Enter the **Automatic disconnection** time and press **OK** .
- Press **End** , then select **Yes** to confirm data storage.
- 8 Select the **Connection mode (Circuits, Packets \* or Circuits + packets)** and press **Select** .
- 9 Select the **Push Parameters** settings.  
Enter the Push **Proxy SMS centre** phone number and press **OK** .
- Enter the **Push Proxy SMS address** and **Push Proxy IP address** phone numbers and press **OK** .
- 10 Press **End** , then select **Yes** to confirm data storage.
- 11 Press **Exit**  or  to return to the standby display.

\* GPRS availability is operator dependent

1. You can also access the Internet menu directly by pressing the Internet softkey from the standby display (provided you haven't personalised the left softkey).
2. If the PPP access phone number, login names and password, Home page http address and IP address are not predefined, these are obtainable from your network operator and/or internet provider.
3. Selecting PPP Access or Proxy again will allow you to change and/or modify any of your settings.

## Selecting a preferred bearer\*

When defining mixed (**Circuit+Packets**) based profiles, you have to select the first bearer to use when starting a connection.

To select a preferred bearer,

- 1 Press . Select **Internet**.
- 2 Select **Settings**. Select **User Preferences**.
- 3 Select **Preferred bearer (Circuit or Packets)**. Press **End** and select **Yes**.
- 4 Press **Exit** or to return to the standby display.

This setting applies to all mixed profiles.

## Personalising your connection settings

The following user settings are available enabling you to optimise the behaviour of your phone whilst connected to the internet.

- 1 Press . Select **Internet**. Select **Settings**.
- 2 Scroll to the following items and turn **On** or **Off** as required:

| Option                                        | Action                                                                                                                                                                     |
|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Clear cache</b>                            | During a live Internet session some of the information and services you have accessed have been 'stored' in an area of memory called the cache. This memory can be cleared |
| <b>Clear address list</b>                     | Selecting this item will clear the last five addresses entered in the URL list                                                                                             |
| <b>User preferences + Full screen</b>         | Used to configure the browser to display pages in full screen mode or not                                                                                                  |
| <b>User preferences + Zoom +/-</b>            | Used to configure the browser to display pages in larger, medium or smaller font                                                                                           |
| <b>User preferences + Scripting</b>           | Used to allow or forbid the use of scripts execution of scripts including in WAP™ pages                                                                                    |
| <b>User preferences + Preferred bearer *</b>  | Used to select the bearer to use when making WAP™ sessions ( <b>Circuit</b> or <b>Packet</b> )                                                                             |
| <b>User preferences + Accept provisioning</b> | Used to define the incoming of Push messages ( <b>Never</b> , <b>Current profile</b> , <b>All profiles</b> or <b>Always</b> )                                              |

- 3 Press **Exit** or to return to the standby display.

\* GPRS availability is operator dependent



- ✔ You can also access the Internet menu directly by pressing the Internet softkey from the standby display (provided you haven't personalised the left softkey).

## Going online and onto the Net

To gain access to the online services offered by your network operator,

- ❶ Press . Select **Internet**.
- ❷ Select **Home page**.
- ❸ **Connecting to** followed by your proxy name will be displayed whilst access is taking place followed by the word **Loading...** (of the home page).

- ✔ You can also access the Internet menu directly by pressing the Internet softkey from the standby display (provided you haven't personalised the left softkey).

Once connected you will be presented with your internet or operator's choice of menu options. The icon at the top of the display indicates a 'live' connection. The icon will appear if your phone is connected to a GPRS network\* during the WAP™ session.

During card browsing, the security can be activated via the "Security setting" (see page 55). This closes the current non secure session and lets you continue local browsing (via the cards in the cache). When a connection to the network is needed again, a secured connection will be requested to the same profile. This may not function properly, due to flush preceding connection parameters by the server. In this case, the browsing may have to be restarted from the beginning.

When the secured connection is established, the icon at the top of the display indicates a 'live' connection in secure mode. The icon will appear if your phone is connected to a GPRS network during the WAP™ session in secure mode.

Use / and/or the softkeys to move up and down the menu, to make selections as well as move backwards and forwards through the menu. Use the left and the right softkeys when selected topics in a menu are highlighted.

---

\* GPRS availability is operator dependent

## Use of whilst online

In the absence of **Options**  whilst online pressing  during a live connection will present an options menu as follows:

| Item                                  | Action                                                                                                                                                            |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Home page</b>                      | Goes to and reloads the home page.                                                                                                                                |
| <b>Bookmarks</b>                      | Provides immediate access to the bookmark list as when not connected. You can add a new bookmark as an empty entry or go to a bookmark, chosen in the list.       |
| <b>Other site + Reload</b>            | Reloads the current WAP™ page.                                                                                                                                    |
| <b>Other site + New address</b>       | Provides access to a specific URL, based on the corresponding menu item.                                                                                          |
| <b>Other site + New address Bango</b> | Provides a quick access to a specific input URL                                                                                                                   |
| <b>Other site + Address List</b>      | Provides access to one of the last five entered URL addresses                                                                                                     |
| <b>Push Messages + Push inbox</b>     | Provides access to the list of all the push messages stored in Inbox.<br>If no message is available, an information message "Push messages - Empty" is displayed. |
| <b>Settings</b>                       | Same as in offline case                                                                                                                                           |
| <b>Save pictures</b>                  | Downloads all pictures displayed in current page, in Inbox.<br>This item is only displayed if some pictures are present in the page                               |
| <b>Disconnect</b>                     | Disconnects the browser from the network, but the browser remains active locally with the current page displayed.                                                 |
| <b>Close session</b>                  | Disconnects the browser from the network. The current page is lost and the WAP™ menu is displayed again.                                                          |

The appearance of these items in the above options menu may be operator dependent and/or the settings in the **Settings** menu.

## Ending the online connection

To end the internet connection,

Press .

 You can also select Close session item under the options menu.

## Creating bookmarks

You may want to revisit or return to some services more frequently than others. These services (or pages) can be stored as *bookmarks* which then provide direct access links into the internet. They can only be used if available on the current connection settings of your network operator and/or internet provider.

There are two ways to add up to 20 bookmarks:

- Directly from the standby display,

**1** Press . Select **Internet**.

- ② Select **Bookmarks**. The list of bookmarks is displayed in alphabetical order.
- ③ Select an empty entry ([...]). Press **New**  and enter the following:

| Option         | Action                                 |
|----------------|----------------------------------------|
| <b>Alias</b>   | Name you want to give to your bookmark |
| <b>Address</b> | Home page address (if known)           |

- ④ Press **End** , then select **Yes** to confirm data storage.
- ⑤ Press **Exit**  or  to return to the standby display.

☒ You can also access the Internet menu directly by pressing the Internet softkey from the standby display (provided you haven't personalised the left softkey).

- During a live connection whilst viewing a page,

- ① Press .
- ② Select **Bookmarks**, then follow the same procedure as when not connected.

☒ Bookmarks can be Edited or Deleted from the Bookmarks item under the Internet menu options whilst offline or online.

## Using bookmarks

Bookmarks can be used:

- directly from standby display,

- ① Press . Select **Internet**.
- ② Select **Bookmarks**.
- ③ Select the bookmark name you require.

☒ You can also access the Internet menu directly by pressing the Internet softkey from the standby display (provided you haven't personalised the left softkey).

- whilst you are browsing the internet:

- ① Press  to display the options menu.
- ② Select **Bookmarks**.
- ③ Select the bookmark name you require.

## Other site

When this option is selected in the **Internet** menu you can enter a known internet address or Bango address site and to go to this site directly from dial up. However unlike the Bookmark feature addresses are not stored and must be entered each time this feature is used.

## Receiving push messages

A push message may be:

- a message indicating that a service is available on the network, or
- a service information message.

To retrieve the information, you will have to connect to a server in the network.

On Push messages reception, a WAP™ session is started and messages are

immediately displayed or stored in the Push Inbox, according to the Push settings. At the end of the transmission the push reception session is ended.

The Push Inbox lets you consult and delete the messages stored and allows a connection to a server, to retrieve the associated information.

When the Push Inbox contains new message(s), an information message is displayed in the standby display with a direct access to the inbox.

To set the push reception parameters,

❶ Press . Select **Internet**.

❷ Select **Settings**.

❸ Select **Push preferences**.

Select the **Accept Push Information** setting which indicates whether no push messages will be received (**Never**), or only push messages initialised by the entity which have the current profile will be accepted (**Current profile**), or only push messages initialised by an entity which have one of the defined profiles will be accepted (**All Profiles**), or all push messages will be accepted (**Always**).

Select the **Push auto-connection** setting which indicates whether a user acknowledgement is needed to establish the connection (**On**) or not (**Off**).

Select the **Push Quiet Mode** setting which indicates whether the downloaded messages will be automatically stored in the Push Inbox (**On**) or directly displayed on the screen (**Off**).

Select the WAP™ SMS filter setting which activates (**On**) or deactivates (**Off**) a filtering on incoming SMS containing SIA.

❹ Press **End** , then select **Yes** to confirm data storage.

❺ Press **Exit**  or  to return to the standby display.

To consult a push message in the Push inbox,

❶ Press . Select **Internet**.

❷ Select **Push inbox**. Summaries of all push messages are displayed according to their reception date and time.

❸ Press **Options** then select **Read text** to display the selected message text in full screen mode.

❹ Press **Exit**  or  to return to the standby display.

The following options are also available:

| Options           | Purpose                                                                                                       |
|-------------------|---------------------------------------------------------------------------------------------------------------|
| <b>Read text</b>  | Provides access to the message text (possibly on several pages)                                               |
| <b>Summary</b>    | Returns to the summary display                                                                                |
| <b>Preview</b>    | Connects to the service, but keeps the message in the inbox allowing another access to the same service later |
| <b>Retrieve</b>   | Connects to the service, and deletes the message from the inbox when the connection to the service is made.   |
| <b>Delete</b>     | Deletes the item                                                                                              |
| <b>Delete all</b> | Deletes all inbox push messages                                                                               |
| <b>Details</b>    | Provides the expiry date for this item (if an expiry date exists)                                             |

## Melodies download

This feature makes use of the 'Digiplug' or the Nokia Smart Messaging system usage, for Trium phones. The principles are as follows:

- Melodies are stored on a Web/WAP™ server, for mobile phones. In this server, melodies are available for phones other than Trium, as well as for Trium phones. This storage is Digiplug responsibility.
- You can access this site by the Internet or WAP™.
- When your phone type is selected, you can see a choice of melodies for download.
- You can choose one or more melodies to download to your phone.
- All chosen melodies are downloaded via SMS, using one message and compressed.
- Once the melody is completely received, it is uncompressed. For each received melody, a screen gives you reception information. You can then install, play or discard the melody.

To play a download melody,

- 1 Select **Options** . Select **Play**. Some information is displayed on the screen, while playing.
- 2 Press either **OK**  or **Exit**  to stop playing.

To install a download melody,

- 1 Select **Options** . Select **Install**.  
If there is enough place, the melody is automatically stored in the imported melodies directory. If there is not enough space left, you are asked to choose which melody to replace, from the set of downloaded melodies on the mobile (melodies that are associated with a ring feature cannot be deleted).  
Once stored, a message is displayed. The melody can be played immediately and selected via the tones settings menu. A subset of melodies from all melodies is reserved for such downloads.
- 2 Press **Exit**  or  to return to the standby display.

 When accessing by WAP™, the procedure is similar.

# Appendix

## Glossary

| Expression        | Meaning                                                                                       |
|-------------------|-----------------------------------------------------------------------------------------------|
| AC/DC charger     | Alternating Current/Direct Current charger                                                    |
| Active call       | The call currently in conversation                                                            |
| ALS               | Alternate Line (Line 2) Service                                                               |
| AoC               | Advise of Charge - subscription service                                                       |
| APN               | Access Point Name                                                                             |
| CB                | Cell Broadcast                                                                                |
| CLA               | Cigarette Lighter Adaptor                                                                     |
| CLI               | Caller Line Identity - displays callers telephone number                                      |
| Conversation mode | When the phone is making or receiving a call                                                  |
| CSD               | Circuit Switched Data                                                                         |
| DES               | Data Encryption standard                                                                      |
| Diverting         | Diverts incoming calls to the phone to another number                                         |
| DN                | Dialling Number                                                                               |
| DTC               | Desk Top Charger                                                                              |
| DTMF              | Dual Tone Multifrequency Tones                                                                |
| FDN               | Fixed Dialling Number                                                                         |
| GPRS              | General Packet Radio Service                                                                  |
| GSM               | Global System for Mobile communications                                                       |
| HF                | Handsfree Car Kit                                                                             |
| http              | HyperText Transfer Protocol                                                                   |
| IN                | Information Numbers of your operator or service provider                                      |
| IP                | Internet Protocol                                                                             |
| LCD               | Liquid Crystal Display                                                                        |
| LED               | Light Emitting Diode                                                                          |
| MMI               | Man machine Interface                                                                         |
| PIN/PIN2          | Personal Identification Number. Supplied by your network/service provider                     |
| PPP               | Point to Point Protocol                                                                       |
| PUK/PUK2          | PIN Unblocking Key. Used to unlock PIN and PIN2. Supplied by your network/service provider    |
| Roaming (Rm)      | The ability to use your telephone on networks other than your home network at home or abroad. |
| SDN               | Service Dialling Number of your operator or service provider                                  |

| Expression   | Meaning                                                                            |
|--------------|------------------------------------------------------------------------------------|
| SIM          | Subscriber Identity Module. Supplied by your network/service provider              |
| SMS          | Short Message Service                                                              |
| SPN          | Service Provider Name                                                              |
| SR           | Status Report - relates to SMS messages                                            |
| Standby mode | When the phone is on, registered onto a network but not making or receiving a call |
| URL          | Uniform Resource Locator                                                           |
| WAE          | Wireless Application Environment                                                   |
| WAP™         | Wireless Application Protocol                                                      |
| WDP          | Wireless Datagram Protocol                                                         |
| WML          | Wireless Mark-up Language                                                          |
| WMLS         | Wireless Markup Language Script                                                    |
| WSP          | Wireless Session Protocol                                                          |
| WTAI         | Wireless Telephony Application Interface                                           |
| WTP          | Wireless Transport Protocol                                                        |

## Trouble shooting

| Problem                                               | Possible cause and solution                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Phone will not switch on                              | Check that the battery is fully charged and correctly connected to the phone.                                                                                                                                                                                                                                                                |
| Charging LED not lit red and no flashing battery icon | There may be no mains supply. Check mains supply. The AC/DC charger may be faulty. Return to your dealer and try substitution with another Mitsubishi adaptor. If faulty contact your dealer.                                                                                                                                                |
| Short standby and talk times                          | Cell broadcast is permanently on, using more battery power.<br>Phone is in a poor signal area and therefore always on full power.<br>Incorrect charging and discharging. Always charge and discharge your battery fully.<br>The battery is wearing out. Replace the battery                                                                  |
| Calls cannot be made or received                      | Check that you have at least one signal strength bar. Try in a stronger signal strength area.<br>If the name of a network is not displayed, check your SIM is all right, check registration with your network/service provider.<br>Call barring option is turned on. Turn it off (see page 34).<br>Call cost limit is reached (see page 20). |
| Stored telephone numbers cannot be recalled           | Fixed Dialed Number or Call Barring features are turned on. Check features and turn them off (see pages 10 and 34).                                                                                                                                                                                                                          |

| <b>Problem</b>                                                                                                                        | <b>Possible cause and solution</b>                                                                                                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Numbers cannot be entered in the display                                                                                              | Keypad lock is on (  is displayed). Press and hold  to turn off. |
| Phone switches on but there is no display                                                                                             | Display contrast is turned down too low. Reset contrast (see page 27).                                                                                                                                                             |
| Battery icon (  ) not flashing 1-2-3 during charging | Indicates a charging or battery problem. Turn off and disconnect the charger. Reconnect and try again. If the problem remains contact your dealer.                                                                                 |
| Flashing                                             | There is not enough memory to store another SMS message. You must delete one or more of the existing stored messages (see page 13).                                                                                                |
| (.....) softkey                                                                                                                       | Function no longer available in the SIM or was subscription dependent. Reprogram the softkey (see page 27).                                                                                                                        |

## Error messages

| <b>Problem</b>                     | <b>Possible cause and solution</b>                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Allowed credit reached!</b>     | You are trying to place an outgoing call and the allowed credit is already reached.<br>The allowed credit limit is reached during an outgoing call (the call is then aborted).                                                                                                                                                                                                                               |
| <b>Busy</b>                        | You are trying to make a call and the call fails because the destination number is already engaged in conversation.                                                                                                                                                                                                                                                                                          |
| <b>Call failed</b>                 | The user is unreachable.<br>The outgoing call fails due to:<br>the network cannot take the call because the system busy or the number is out of order or<br>the number is unreachable or<br>the network does not answer or<br>the option to hide your phone number when calling is not supported by the network<br>Control the ability to hide your ID when making a call (service availability in network). |
| <b>Cancelled. No type selected</b> | Cell broadcast activation has been requested but no message type has been selected.                                                                                                                                                                                                                                                                                                                          |
| <b>Cannot execute command</b>      | You have made a request which cannot be performed in the current call situation.                                                                                                                                                                                                                                                                                                                             |
| <b>Can't display message</b>       | The short message text cannot be displayed (characters not recognised, incorrect format etc...)                                                                                                                                                                                                                                                                                                              |
| <b>Check SIM!</b>                  | There is no SIM present or the SIM is incorrectly inserted. See <i>First Steps with your Eclipse</i> for more details.                                                                                                                                                                                                                                                                                       |



| <b>Problem</b>                                                                                                                                          | <b>Possible cause and solution</b>                                                                                                                                                                                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Check your password</b>                                                                                                                              | You changed the call barring password or<br>You changed the call barring service status.<br>The entered password seems to be wrong or incorrect.                                                                                                                                                                                                         |
| <b>Check your request</b>                                                                                                                               | You made a request for a service that seems to be impossible to fulfil.                                                                                                                                                                                                                                                                                  |
| <b>Check your subscription</b>                                                                                                                          | You tried to activate a GSM service. You are requested to check your subscription regarding the related service rights of use/access.                                                                                                                                                                                                                    |
| <b>Connection failure</b>                                                                                                                               | The connection cannot be established.                                                                                                                                                                                                                                                                                                                    |
| <b>Error!</b>                                                                                                                                           | The network cannot perform your request and generates an error result.                                                                                                                                                                                                                                                                                   |
| <b>Execution error</b>                                                                                                                                  | The current object/script has an execution problem.                                                                                                                                                                                                                                                                                                      |
| <b>Failed</b>                                                                                                                                           | An SMS sending process failed (the short message cannot be sent).                                                                                                                                                                                                                                                                                        |
| <b>Incorrect entry</b>                                                                                                                                  | You entered a character string with a syntax error.                                                                                                                                                                                                                                                                                                      |
| <b>Invalid number</b>                                                                                                                                   | You tried to make a call and the call is rejected by the network because the network does not recognise the phone number structure or<br>you tried to store a phone number that is too long to be stored in the selected location or<br>you tried to move a phone entry to a location that is unable to receive the phone number (phone number too long) |
| <b>Keypad locked</b><br><b>Press "unlock"</b><br><b>and  to unlock</b> | A press on any key is made with keypad locked.<br>Keypad lock is on (  is displayed). Press and hold  to turn off.                                                                     |
| <b>Low battery!</b>                                                                                                                                     | This text is displayed when the battery becomes too low and the mobile will soon be switched off automatically.                                                                                                                                                                                                                                          |
| <b>Malformed content</b>                                                                                                                                | The WML could not be compiled or was misinterpreted.                                                                                                                                                                                                                                                                                                     |
| <b>Network busy</b>                                                                                                                                     | You tried to make a call. The call is rejected by the network due to congestion problems.                                                                                                                                                                                                                                                                |
| <b>Network not allowed</b>                                                                                                                              | When selecting network manual search, you have selected a network that rejects the connection.                                                                                                                                                                                                                                                           |
| <b>New PIN incorrect. Try again</b>                                                                                                                     | Changing PIN: the new PIN code values differ (value control).                                                                                                                                                                                                                                                                                            |
| <b>New PIN2 incorrect. Try again</b>                                                                                                                    | Changing PIN2: the new PIN2 code values differ (value control).                                                                                                                                                                                                                                                                                          |
| <b>No action performed</b>                                                                                                                              | When a copy/move operation is made on memories but no conditions have been changed (same memory, number and name).                                                                                                                                                                                                                                       |

| <b>Problem</b>                                                                                           | <b>Possible cause and solution</b>                                                                                                                 |
|----------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>No response</b>                                                                                       | You made a call to a remote user and no response has been received.                                                                                |
| <b>Not allowed</b>                                                                                       | Your number/character entry is not allowed.                                                                                                        |
| <b>Not allowed (fixed dialling)</b>                                                                      | A call is tried, but cancelled due to fixed dialling control (the number dialled does not match with one of the fixed dialling numbers in memory). |
| <b>Not Available</b>                                                                                     | There is no more SIM storage.                                                                                                                      |
| <b>Number changed</b>                                                                                    | The called number has changed.                                                                                                                     |
| <b>PIN blocked</b>                                                                                       | A wrong PIN code has been entered 3 times.                                                                                                         |
| <b>PIN2 blocked</b>                                                                                      | A wrong PIN2 code has been entered 3 times.                                                                                                        |
| <b>PUK2 blocked</b>                                                                                      | A wrong PUK2 code has been entered 10 times.<br>The SIM services protected by the PIN2 code have now been permanently disabled.                    |
| <b>Reaching allowed credit!</b>                                                                          | The cost limit is about to be reached. The connected call will end automatically when the limit is reached.                                        |
| <b>Ring volume Off</b>                                                                                   | The ring volume is set to 0 (no volume).                                                                                                           |
| <b>Service not available</b>                                                                             | Activating some GSM services that are not available on the network                                                                                 |
| <b>SIM blocked. Contact provider</b>                                                                     | A wrong PUK has been entered 10 times.<br>The SIM card has been permanently disabled and needs to be replaced by a new one.                        |
| <b>SIM blocked. Enter PUK:</b>                                                                           | A wrong PIN code has been entered 3 times.<br>Enter the PUK code to unblock the SIM card.                                                          |
| <b>SIM fixed full<br/>SIM names full<br/>Phone names full</b>                                            | The corresponding memory is full.                                                                                                                  |
| <b>SMS memory locations are full</b>                                                                     | The storage of new messages (when writing a new SMS) is impossible.                                                                                |
| <b>Wrong code. Try again</b>                                                                             | A wrong phone lock code has been entered.                                                                                                          |
| <b>Wrong new code. Try again</b>                                                                         | The new phone lock codes do not match (value control).                                                                                             |
| <b>Wrong PIN, try again<br/>Wrong PIN2, try again<br/>Wrong PUK, try again<br/>Wrong PUK2, try again</b> | A wrong code has been entered.                                                                                                                     |

# Guarantee

---

## Pan European Service

If you require service, then in the first instance, you should contact your supplier. Should you experience any difficulty then please contact your nearest MITSUBISHI location listed below for information on other service centres.

|                                         |                                 |                                        |
|-----------------------------------------|---------------------------------|----------------------------------------|
| UNITED KINGDOM<br>Tel: (0800) 912 00 20 | ESPAÑA<br>Tel: (902) 11 68 58   | BELGIUM<br>Tel: (0800) 775733          |
| FRANCE<br>Tel: (0825) 86 82 83          | ITALIA<br>Tel: (800) 27 59 02   | SWITZERLAND<br>Tel: 032 843 65 11      |
| DEUTSCHLAND<br>Tel: (01803) 33 71 84    | IRELAND<br>Tel: (1800) 92 70 12 | THE NETHERLANDS<br>Tel: (0800) 0223825 |

To obtain Warranty Service, you will require your original equipment purchase invoice or irrefutable proof of purchase.

Please see warranty terms and conditions for in warranty service.

## Pan-european GSM End-user Guarantee Conditions

1. You can benefit from this guarantee only if you are the original end-user purchaser.
2. MITSUBISHI guarantees that for a period of twelve (12) months from the date of purchase from your dealer, the Product shall be free from defects in materials and workmanship. Subject to the conditions below, Mitsubishi will indemnify you against all cost of parts and labour for repairs to or replacement of the product or parts (which may include equipment of similar type) where conducted by an authorised MITSUBISHI GSM service centre. MITSUBISHI shall be entitled to retain product which has been replaced.
3. Any claims must be made to an authorised MITSUBISHI GSM service centre in the countries mentioned in the service card enclosed with the product. In case of difficulty you can contact the Mitsubishi companies listed in the service card to obtain details of your nearest authorised MITSUBISHI GSM service centre. As a condition of this guarantee, the date of your purchase must be confirmed by producing your original invoice from your supplier or your sales receipt, showing the serial number, together with the service card. Final determination of guarantee claim eligibility shall be made by MITSUBISHI. MITSUBISHI shall not be liable for shipment costs to and from an authorised GSM MITSUBISHI service centre; the product travels at your risk.
4. This guarantee does not cover:
  - a) battery defects of any nature;
  - b) non-compliance with directions for use;
  - c) installation or removal charges where the product is installed in a vehicle;
  - d) defects or failures caused by accident, misuse, improper installation or improper repair by an unauthorized repairer, alteration or modification, neglect, failure to use for normal purpose, Acts of God, water ingress, use in adverse environmental conditions (humidity or temperature);
  - e) cost of or performance of modifications to product to adapt or adjust to conform to national or local safety laws, where such safety laws go beyond harmonised European Union standards;
  - f) loss of use of the product or consequential loss of any nature;
  - g) loss of use of air-time, loss of use of any loaned equipment or ancillary equipment;
  - h) provision of incorrect or insufficient signal on air-time network, upgrading of product software to changes in network operating parameters, mains supply voltage fluctuations, incorrect SIM card (memory card) parameters for connection to airtime retailer;
  - i) damage caused by non-MITSUBISHI accessories.
5. Any guarantee claim or service does not extend the original guarantee period unless so required by prevailing national law.
6. This guarantee is valid only if the product is purchased and used in the European Union, Norway, Iceland or Switzerland.

THIS GUARANTEE DOES NOT AFFECT YOUR STATUTORY RIGHTS.



## **DECLARATION OF COMPLIANCE**

Name : **Mitsubishi Electric Telecom Europe S.A.**  
RCS Nanterre B 307 593 129  
Address : **25, boulevard des Bouvets**  
Town : **Nanterre Cedex**  
Postal code : **92741**

### **Identification of the product**

Nature : **Mobile Cell Telephone**  
Type : **Dual band GSM 900/DCS 1800**  
Sales reference : **MT-450**  
Other information :

### **Identification of the notified organization**

Name : **Autorité de Régulation des Télécommunications (ART)**  
Identification number : **0165**  
Procedure followed : **Annex III of the directive 1999/5/CE**

Declares under its entire responsibility that the product described above complies with the following basic applicable requirements (and in particular those in the 1999/5/CE directive):

Article 3.1a: (health protection and user safety)  
**73/23/CEE, ES 59005**

Article 3.1b: (protection requirements concerning electromagnetic compatibility)  
**89/336/CEE, ETS 300 342-1**

Article 3.2: (proper use of the radio-electric spectrum so as to avoid damaging interference)  
**EN 301 511**

To this effect, declares that all the radio test series have been carried out.

1st of June 2001,



Viet Mailam  
Managing Director

# Index

## A

|                          |    |
|--------------------------|----|
| Access point names ..... | 54 |
| Alarm                    |    |
| Reminder .....           | 50 |
| Alarm clock .....        | 49 |
| Alert mode .....         | 23 |
| Alert tone               |    |
| Turning on/off .....     | 14 |
| Alert tones .....        | 23 |
| Any key answer .....     | 27 |
| Auto                     |    |
| Answer .....             | 28 |
| Retry .....              | 28 |
| Auto Switch Off .....    | 29 |
| Auto Switch On .....     | 29 |
| Automatic search .....   | 34 |

## B

|                           |        |
|---------------------------|--------|
| Backlight .....           | 27     |
| Balance information ..... | 19     |
| Barring password          |        |
| Call .....                | 39     |
| Bookmarks                 |        |
| Creating .....            | 58     |
| Using .....               | 59     |
| Broadcast                 |        |
| Alert .....               | 36     |
| Language .....            | 37     |
| Message types .....       | 36, 37 |
| On/Off .....              | 36     |

## C

|                             |            |
|-----------------------------|------------|
| Cache memory                |            |
| Clearing .....              | 56         |
| Call                        |            |
| Duration .....              | 19         |
| Reminder .....              | 19         |
| Times .....                 | 18         |
| Call barring .....          | 34         |
| Call costs                  |            |
| Reset .....                 | 21         |
| Call timer                  |            |
| Reset .....                 | 20         |
| Caller line identity .....  | 31         |
| Calls & Times .....         | 18         |
| Call costs .....            | 20, 21     |
| Call timers .....           | 18, 19, 20 |
| Calls log .....             | 18         |
| Costs .....                 | 20         |
| Line selection .....        | 22         |
| Calls Log .....             | 18         |
| CB .....                    | 35         |
| CB messages                 |            |
| Deleting .....              | 37         |
| Editing .....               | 37         |
| Reading .....               | 36         |
| Cell broadcast .....        | 35         |
| CLI .....                   | 31         |
| Connection profile .....    | 55         |
| Connectivity .....          | 51         |
| Inbox .....                 | 52         |
| Infrared port .....         | 51         |
| Statistics .....            | 52         |
| Cost management .....       | 20         |
| Creating a draft text ..... | 14         |
| Credit limit .....          | 21         |
| Currency-converter .....    | 48         |

## D

|                                |            |
|--------------------------------|------------|
| Diary                          |            |
| Calendar .....                 | 41, 43, 44 |
| Tasks list .....               | 45         |
| Display contrast .....         | 27         |
| Diverting incoming calls ..... | 30         |
| Downloaded melodies .....      | 23         |
| Draft text                     |            |
| Creating .....                 | 14         |
| Editing .....                  | 15         |

## E

|                            |    |
|----------------------------|----|
| Editing a draft text ..... | 15 |
| Error messages .....       | 64 |

## F

|                              |    |
|------------------------------|----|
| FDN .....                    | 10 |
| Fixed dialling numbers ..... | 10 |

## G

|                               |        |
|-------------------------------|--------|
| Games .....                   | 53     |
| Glossary .....                | 62     |
| GPRS access point names ..... | 54, 55 |
| Graphics themes .....         | 25     |
| GSM Services .....            | 30     |
| Call barring .....            | 34, 35 |
| Call diverting .....          | 30, 31 |
| Call waiting .....            | 31     |
| Mode of operation .....       | 33     |
| Network .....                 | 33, 34 |
| Receiving caller ID .....     | 32     |
| Sending my ID .....           | 32     |
| Guarantee .....               | 67     |

## H

|                 |    |
|-----------------|----|
| Home page ..... | 55 |
|-----------------|----|

## I

|                           |            |
|---------------------------|------------|
| Inbox .....               | 52         |
| Incoming Calls            |            |
| Diverting .....           | 30         |
| Information numbers ..... | 4          |
| Infrared port .....       | 51         |
| Close .....               | 51         |
| Open .....                | 51         |
| Internet .....            | 54         |
| Bookmarks .....           | 58, 59     |
| Going online .....        | 57         |
| GPRS access point         |            |
| names .....               | 55         |
| GPRS access points .....  | 54         |
| Home page .....           | 55, 57     |
| IP address .....          | 55         |
| Login name .....          | 55         |
| Login password .....      | 55         |
| Normal port .....         | 55         |
| Other site .....          | 59         |
| Personalising .....       | 56         |
| Phone number .....        | 55         |
| Preferred bearer .....    | 56         |
| Profile list .....        | 55         |
| Proxy name .....          | 55         |
| Receiving push            |            |
| messages .....            | 59         |
| Secure port .....         | 55         |
| Settings .....            | 54, 55, 56 |
| IP address .....          | 55         |

## K

|                   |        |
|-------------------|--------|
| Keypad lock ..... | 26     |
| Keys              |        |
| Setting .....     | 27, 28 |

## L

|                          |                    |
|--------------------------|--------------------|
| Language selection ..... | 26                 |
| Line 1 .....             | 10, 18, 19, 22, 31 |
| Line 2 .....             | 10, 18, 19, 22     |
| 26, 28, 31               |                    |
| Login name .....         | 55                 |
| Login password .....     | 55                 |

- M**
- Managing SMS messages ..... 13
  - Melodies ..... 23, 61
  - Melodies download ..... 61
  - Menu map ..... 2
  - Message templates ..... 17
  - Messages ..... 13
    - Alert ..... 14
    - Broadcast ..... 35
    - Draft texts ..... 14, 15
    - Inbox ..... 13
    - Msg Templates ..... 17
    - Outbox ..... 16
    - Settings ..... 14, 17
    - Statistics ..... 17
    - Write new ..... 15
  - Mobile number
    - Hiding ..... 31
    - Showing ..... 31
  - Mode of operation
    - Modem ..... 33
    - Standard ..... 32
  - Modem ..... 33
- N**
- Network ..... 33
  - Network serv. .... 4
  - Normal port ..... 55
- O**
- Office Tools
    - Alarm clock ..... 49, 50
    - Currency converter ..... 48
    - Diary ..... 41, 43, 44, 45
    - World clock ..... 48, 49
  - Office tools ..... 41
    - Calculator ..... 47
    - Voice memo ..... 46
  - Online connection ..... 57
    - Bookmarks ..... 58, 59
    - Ending ..... 58
    - Personalising ..... 56
  - Outbox ..... 16
  - Own number ..... 10
- P**
- Phone
    - Customising ..... 23
  - Phone Book ..... 5
    - Add name ..... 5, 7
    - Calling numbers ..... 8
    - Fixed dialling ..... 10, 11
    - Free space ..... 8
    - Own numbers ..... 10
    - Read ..... 8
    - Statistics ..... 8
    - Viewing numbers ..... 8
    - Voice dialling ..... 11, 12
  - Phone lock ..... 37
    - Code ..... 37
  - Phone number ..... 55
  - Phonebook
    - Voice dialling ..... 11
  - PIN code ..... 38
  - PIN2 code ..... 38
  - Problems ..... 64
  - Programmable
    - Softkeys ..... 27
  - Proxy name ..... 55
  - PUK code ..... 39
  - PUK2 code ..... 39
  - Push messages ..... 59
- R**
- Ramping ..... 25
  - Rayman Bowling ..... 53
  - Rayman Garden ..... 53
  - Reading an SMS message ..... 13
  - Reminder - call time ..... 19
  - Ring ..... 23
  - Ring tone ..... 23
- S**
- Scripting ..... 56
  - SDN numbers ..... 4
  - Secure port ..... 55
  - Security ..... 37
    - Features ..... 37
  - Sending an SMS message ..... 15
  - Settings ..... 23
    - Auto features ..... 28, 29
    - Broadcast ..... 35, 36, 37
    - Default settings ..... 29
    - Display ..... 27
    - Graphics themes ..... 25
    - GSM Services ..... 30, 31, 32, 33, 34, 35
    - Internet ..... 55
    - Keypad lock ..... 26
    - Keys ..... 27, 28
    - Language ..... 27
    - Phone settings ..... 26, 27, 28, 29
    - Security ..... 37, 38
    - Tones ..... 23, 24, 25
    - Voice Mail ..... 25, 26
  - Show costs ..... 21
  - Silent ..... 23
- SIM**
- Application tool kit ..... 4
- SMS**
- SMS ..... 13
  - SMS messages
    - Managing ..... 13
    - Preparing your phone ..... 14
    - Reading ..... 13
    - Sending ..... 15
    - Storing ..... 15
  - Softkey programming ..... 27
  - Solutions ..... 63, 64
  - Speed dialling ..... 28
  - Standard ..... 32, 33
  - Storage consumption ..... 17
  - Storing an SMS message ..... 15
  - Storing names and numbers ... 5
- T**
- Tones ..... 23
  - Trouble shooting ..... 63
- V**
- Vibrate ..... 23
    - & ring ..... 23
    - then ring ..... 23
  - Voice dialling
    - Creating a voice pattern ..... 11
    - Making a call ..... 12
  - Voice Mail
    - Alert ..... 26
    - Call ..... 26
    - Number ..... 25
  - Voice mail ..... 25
  - Voice memo ..... 46
  - Volume
    - Alarm ..... 24
    - alert mode ..... 23
    - Conversation ..... 24
    - Key tones ..... 24
    - Ring ..... 24
- W**
- WAP™ ..... 54
  - World clock ..... 48